



### WARNINGS:


- Do not assemble continuous run on the ground and lift into place. Joints will distort and not create a tight fit. Joining hardware will have to be purchased and replaced.
- Risk of electrical shock or fire, disconnect power during installation or servicing. Read all instructions completely before starting installation. Install and wire in accordance to all national and local codes by a certified electrician. Fixture may be sharp, handle with care. Let fixture cool before main-

### AVERTISSEMENTS

- Risque d'électrocution ou d'incendie. Déconnectez l'alimentation durant l'installation ou la maintenance. Lisez attentivement toutes les instructions avant de commencer toute installation. Faites installer et câbler selon les normes Nationales et Locales par un électricien certifié. Les installations peuvent être coupantes, à manipuler avec précaution. Laissez refroidir les installations avant une opération de maintenance.

### ADVERTENCIA

- Riesgo de descarga eléctrica o un incendio, desconecte la alimentación durante la instalación o servicio. Leer todas las instrucciones completas antes de empezar la instalación. Instalar y cablear en acuerdo a las reglas nacionales y códigos locales por un electricista certificado. El accesorio puede estar agudo, agarre con cuidado deje que el accesorio. Enfriar antes de mantenimiento.

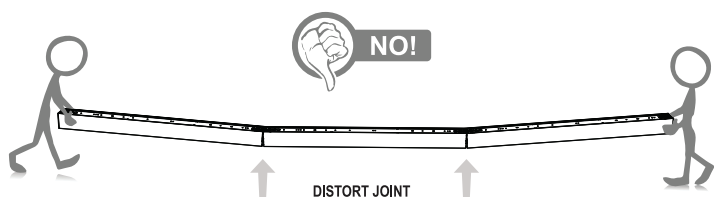


## ROUGH-IN AND LAYOUT GUIDELINES


### NOTES

- There are four unique luminaire types
  - INDIVIDUAL
  - STARTER
  - MID
  - END
- Each luminaire ships with captive end caps and joining hardware, there are no loose parts.
- ALL CRITICAL MOUNTING DIMENSIONS ARE BASED OFF OF HOUSING ENDS, NOT END CAPS


### INDIVIDUAL LUMINAIRE

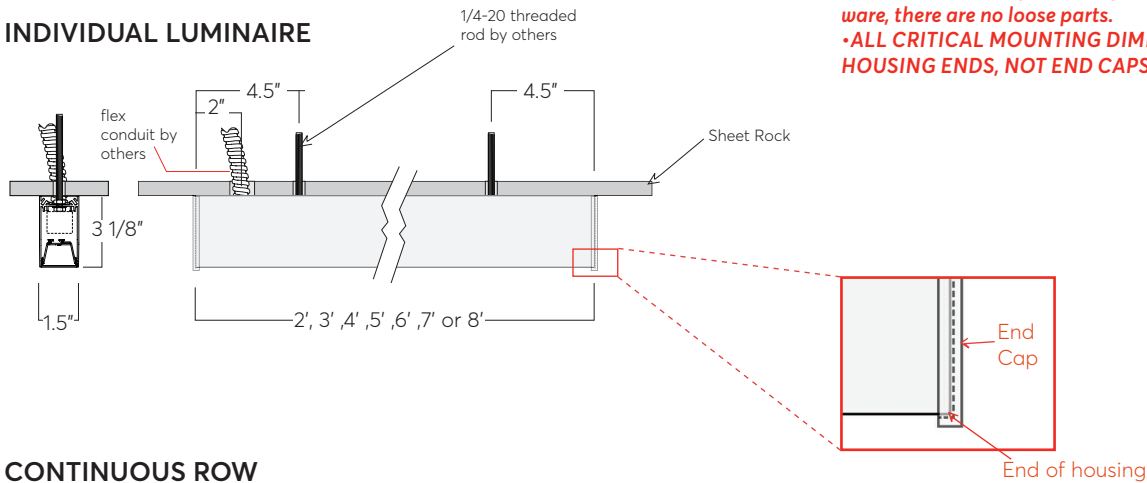


### CONTINUOUS ROW

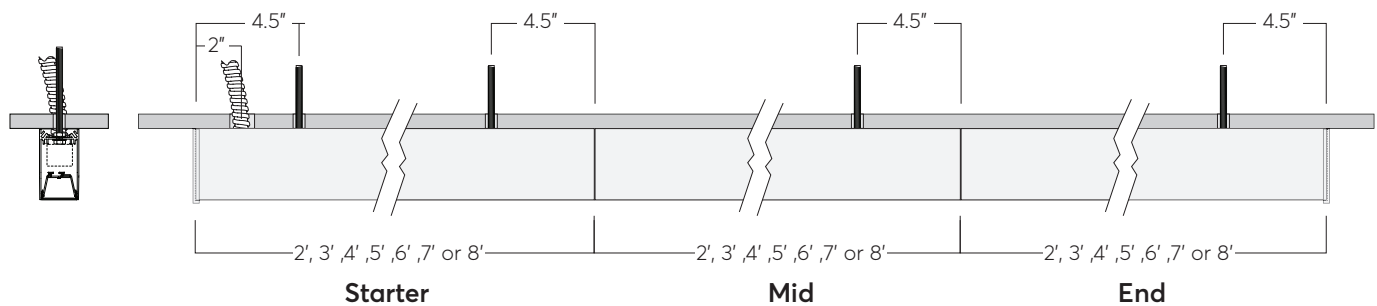


### INSTALL AN INDIVIDUAL LUMINAIRE

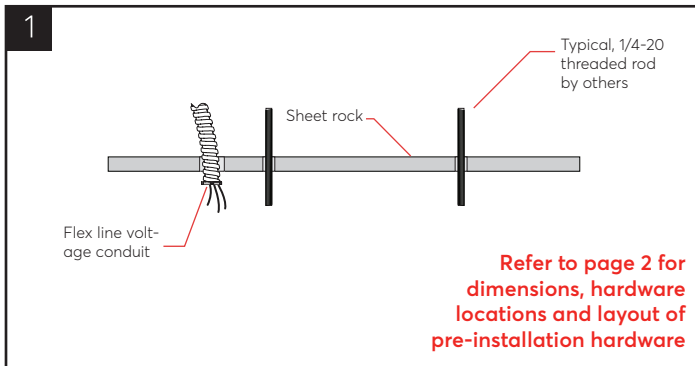


Rough-in structural and power accommodations with typical hardware (by others) Refer to dimensional data on page 2.

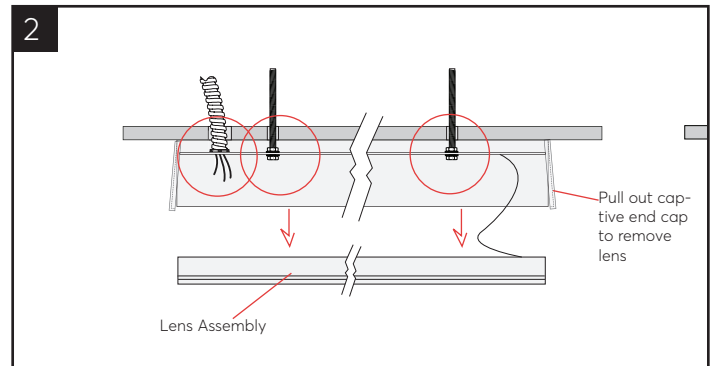


Remove lens by first pulling back spring loaded end cap then pull lens out with Nulite provided tool or flathead screw driver. Next physically connect the luminaire structure with bolts and washers as shown. Finally physically connect whip to luminaire.

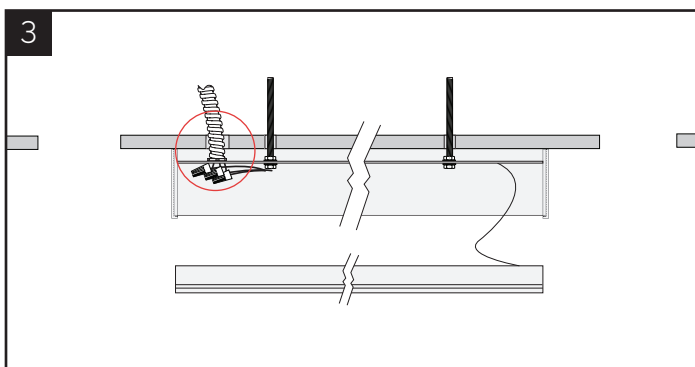

Make electrical splice by certified electrician.

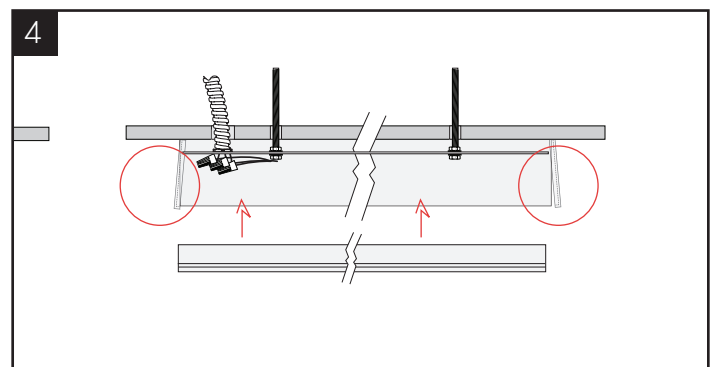


Re-attach lens (End caps must be pried out to get lens into luminaire.)

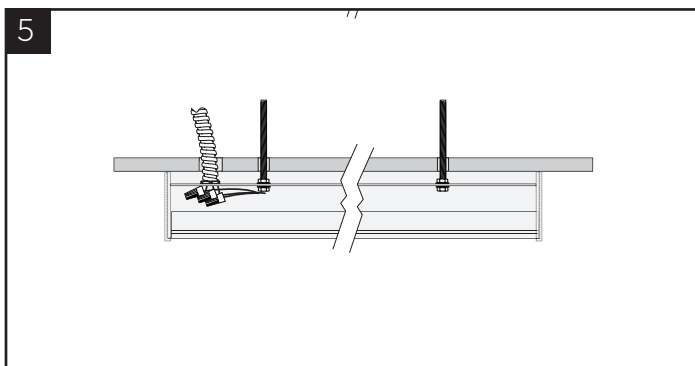


Installation complete.


### INSTALLING CONTINUOUS ROWS

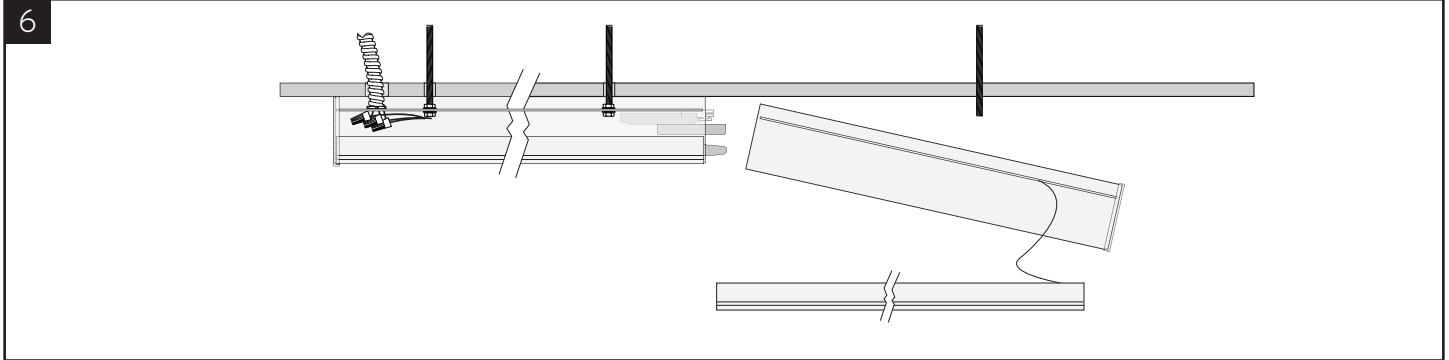


Repeat steps 1 - 6 to install the row starter, then rotate next fixture into place as shown to ensure tabs engage into the first luminaire, while also sliding structural rod into mounting hole (lens must be removed first).

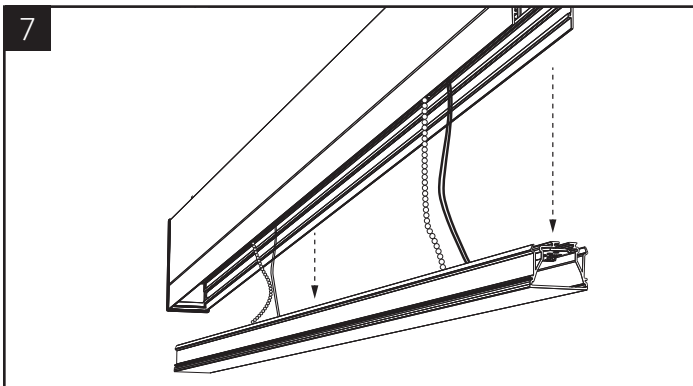


Dislodge the lens/LED board assembly from the bottom of the luminaire and let it hang by the support chains.

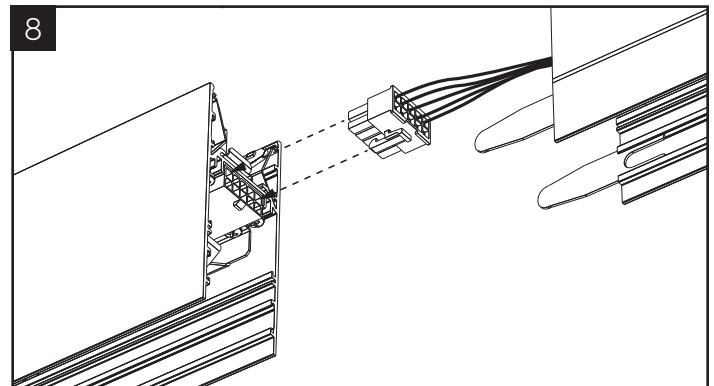

Connect male electrical connector from next fixture to female connector on the current fixture.

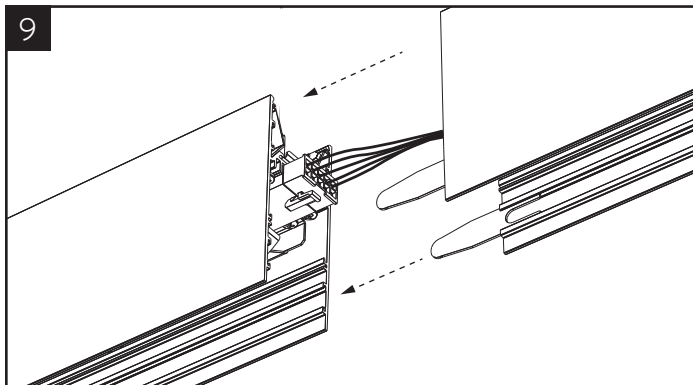


Insert alignment tabs from the next fixture into the slots on the current fixture.

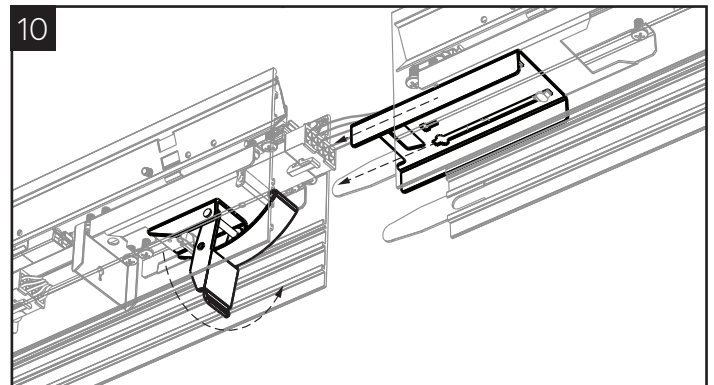


Release the alignment strap from the current fixture and extend the catch tray from the next fixture.


### INSTALLING CONTINUOUS ROWS

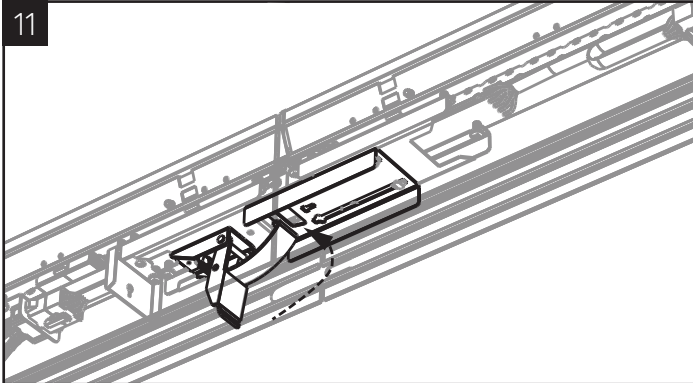

11 Connect the strap to the hole in the catch tray.

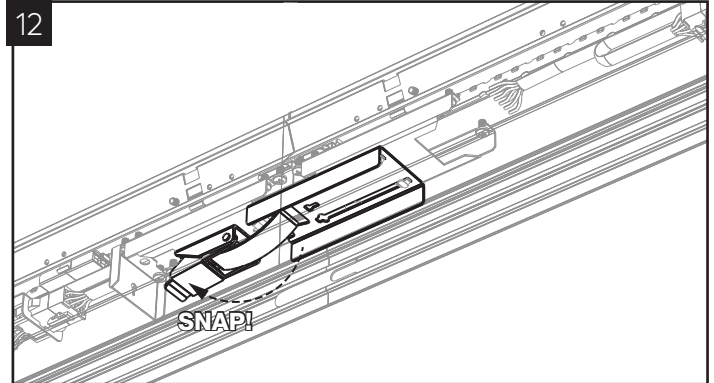

12 Collapse the alignment strap back to its original position to lock the two fixtures together.

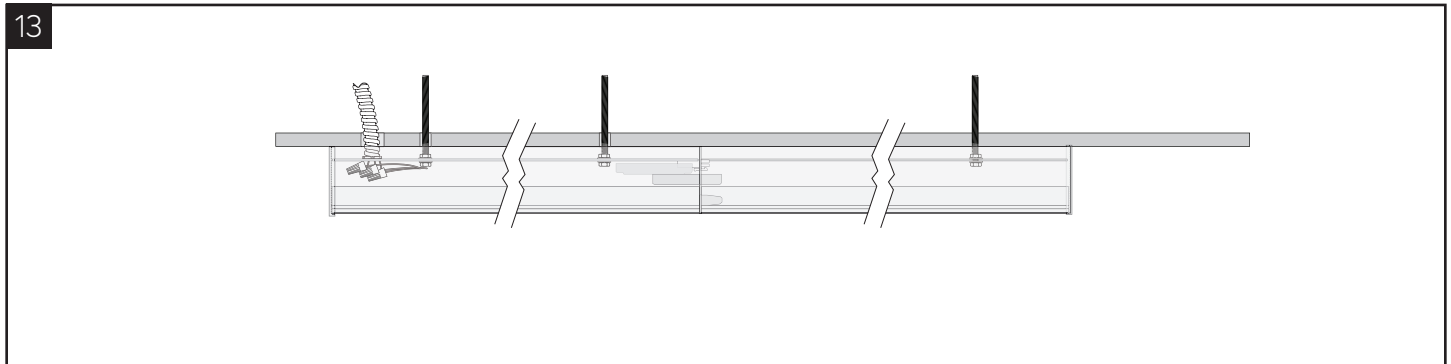

13 Reattach lens as per step 4 on page 3 and installation is complete.