



RXT Service Instructions

Ensure all power is disconnected from luminaire before beginning work.


These service instructions apply to all configurations of RXT (Recessed/Pendant/Surface/Wall – and both direct as well as direct/indirect configurations).



Step 1: Insert flat head screw driver into gap between lens and housing and carefully pry lens from housing (this will need to be done in multiple locations along one side of the lens to remove).



Step 2: Remove screws from gear tray that hold it to the extrusion (checked screws).

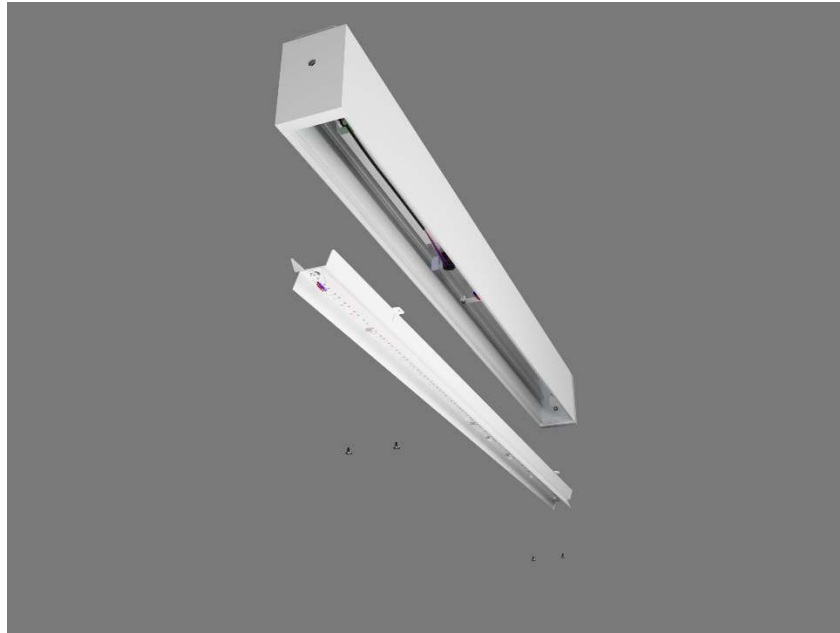

Step 3: Remove gear tray from housing and disconnect quick connects from driver. A new gear tray can be connected, and steps reversed to put luminaire back in working condition. Driver can also be removed and replaced during this stage.