



INDIVIDUAL FIXTURES

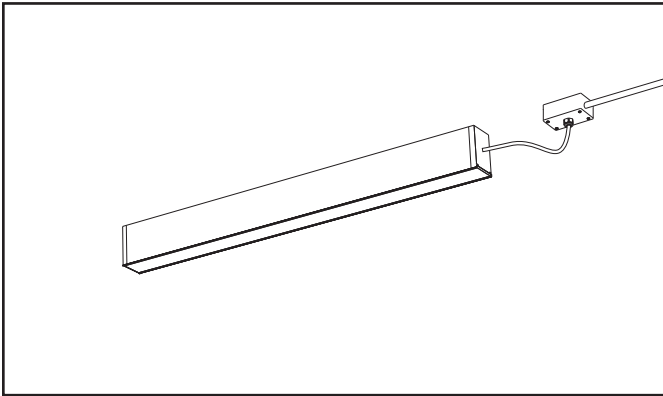

CONTINUOUS ROW FIXTURES

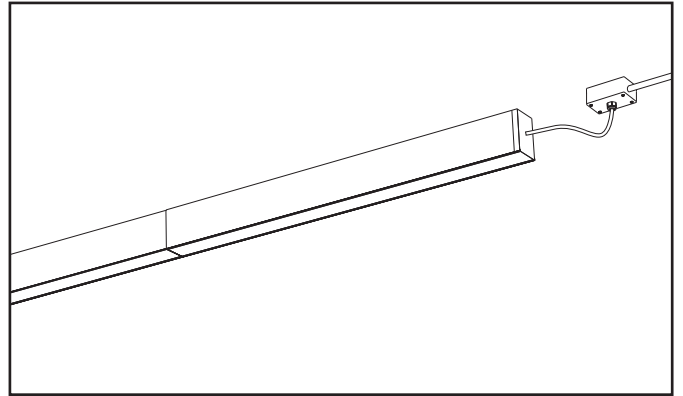

WARNINGS:


- Do not assemble continuous run on the ground and lift into place. Joints will distort and not create a tight fit. Joining hardware will have to be purchased and replaced.
- Risk of electrical shock or fire, disconnect power during installation or servicing. Read all instructions completely before starting installation. Install and wire in accordance to all national and local codes by a certified electrician. Fixture may be sharp, handle with care. Let fixture cool before maintenance.

AVERTISSEMENTS

- Risque d'électrocution ou d'incendie. Déconnectez l'alimentation durant l'installation ou la maintenance. Lisez attentivement toutes les instructions avant de commencer toute installation. Faites installer et câbler selon les normes Nationales et Locales par un électricien certifié. Les installations peuvent être coupantes, à manipuler avec précaution. Laissez refroidir les installations avant une opération de maintenance.


ADVERTENCIA

- Riesgo de descarga eléctrica o un incendio, desconecte la alimentación durante la instalación o servicio. Leer todas las instrucciones completas antes de empujar la instalación. Instalar y cablear en acuerdo a las reglas nacionales y códigos locales por un electricista certificado. El accesorio puede estar agudo, agarre con cuidado deje que el accesorio. Enfriar antes de mantenimiento.

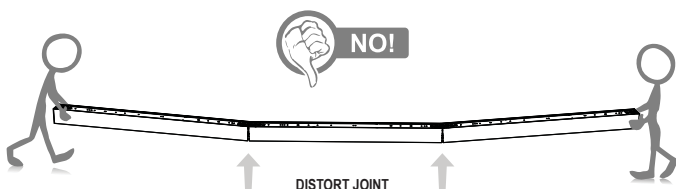


LIGHTING SYSTEM COMPONENTS


INDIVIDUAL LUMINAIRE

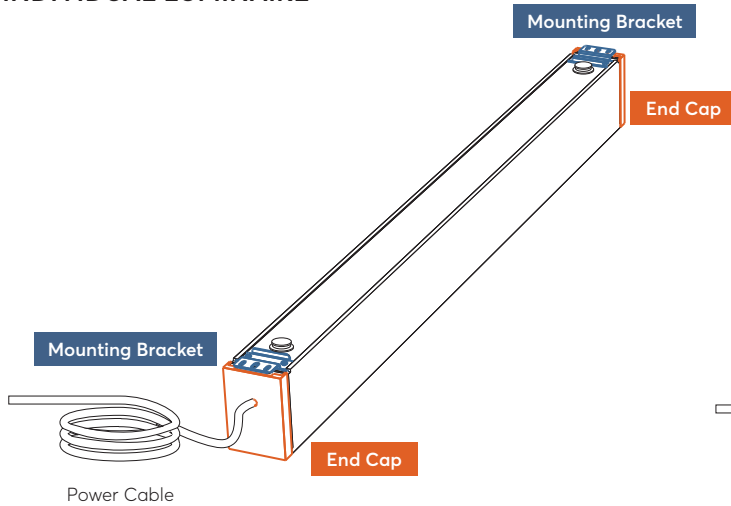

CONTINUOUS LUMINAIRE

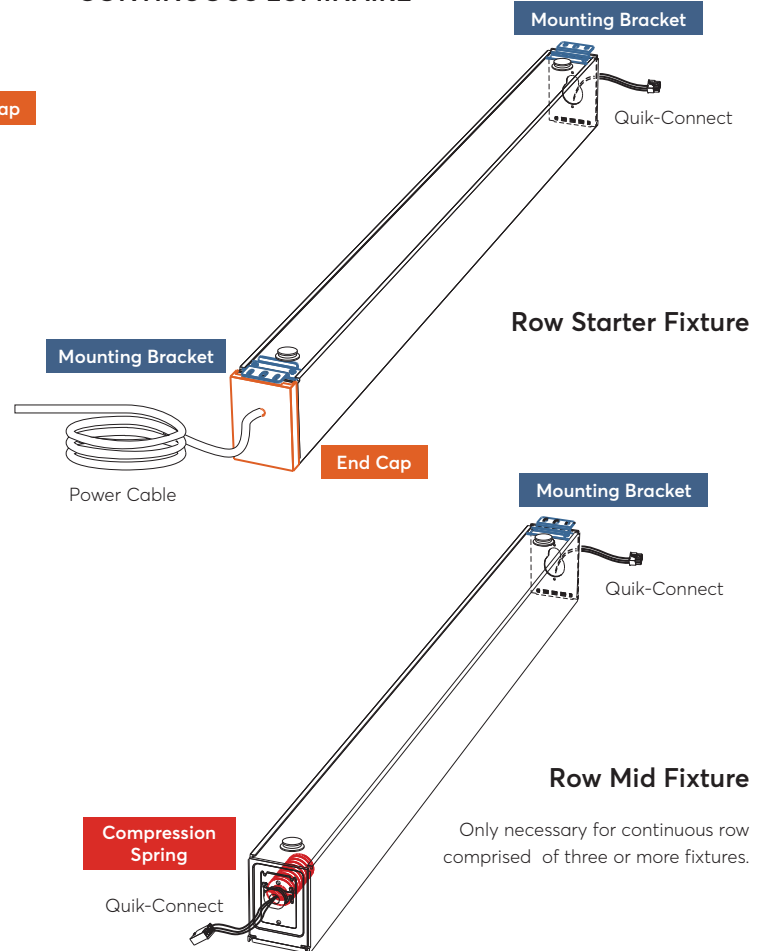

Mounting and Electrical Components



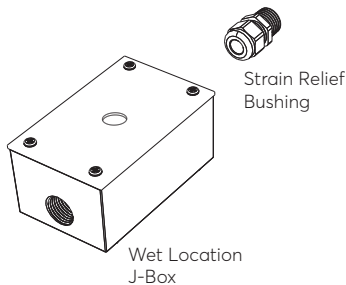


Package Contents



- (1) Strain relief bushing (for individual or starter only)
- (1) Wet location j-box (for individual or starter only)

***Every luminaire will have an integral driver.


LUMINAIRE INSTALLATION PLANNING

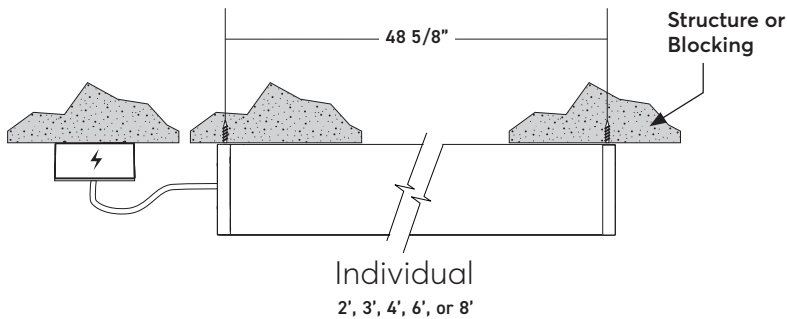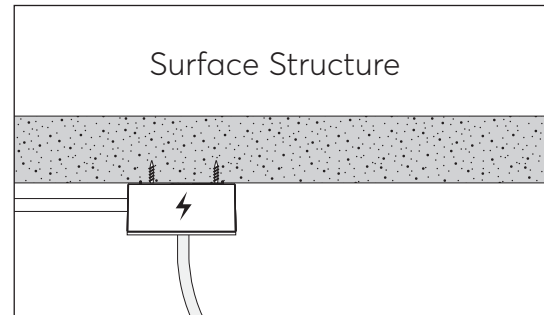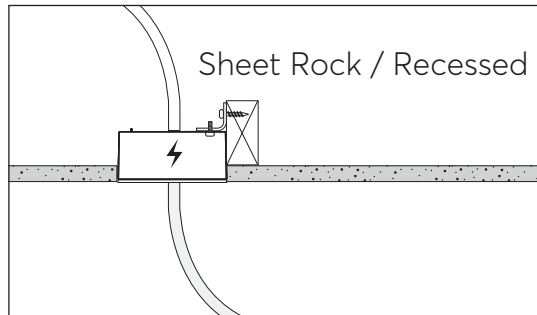


Wet Location J-box
for electrical connection
(included)

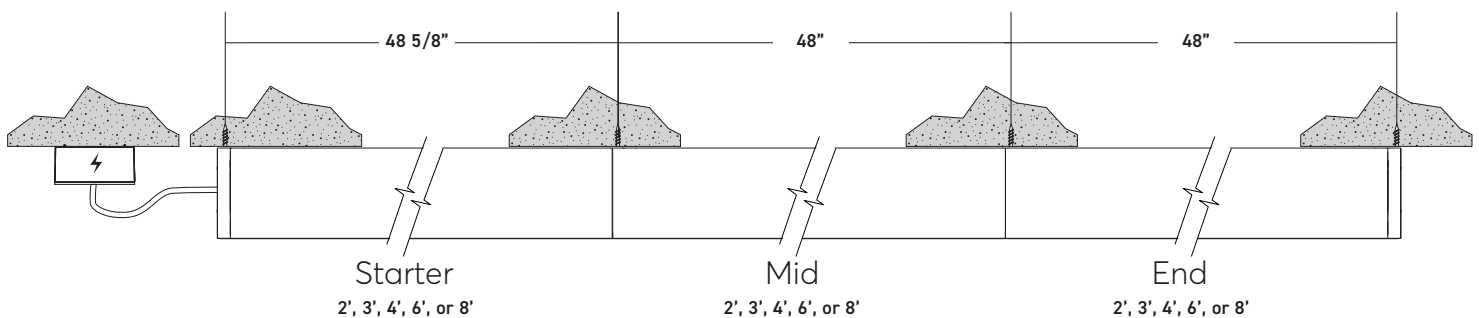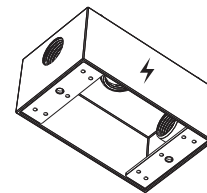


INSTALLING RXT SURFACE LUMINAIRES

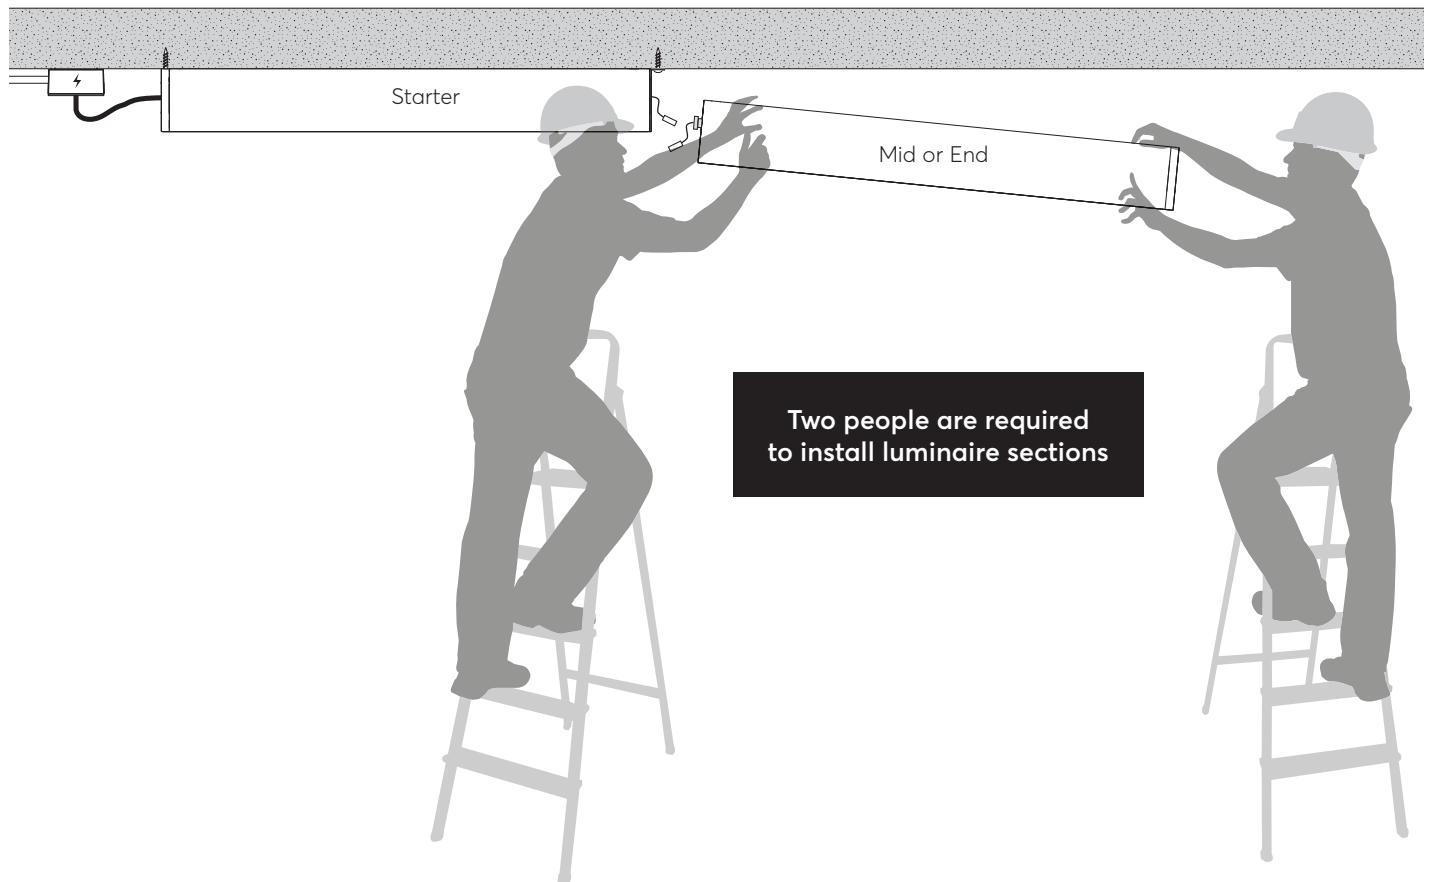


INSTALLING AN INDIVIDUAL OR ROW STARTER LUMINAIRE

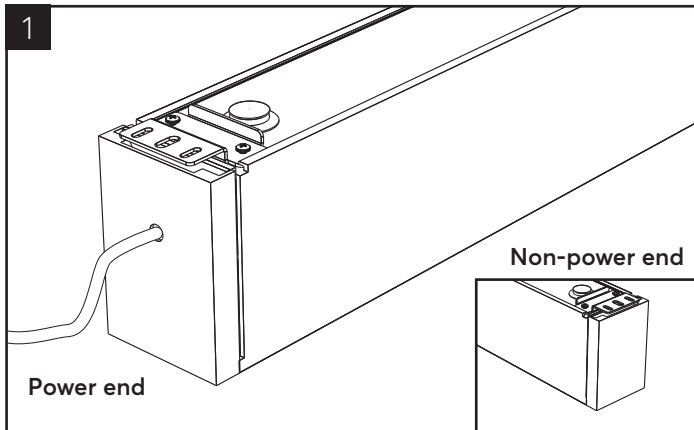


Remove end caps from fixture

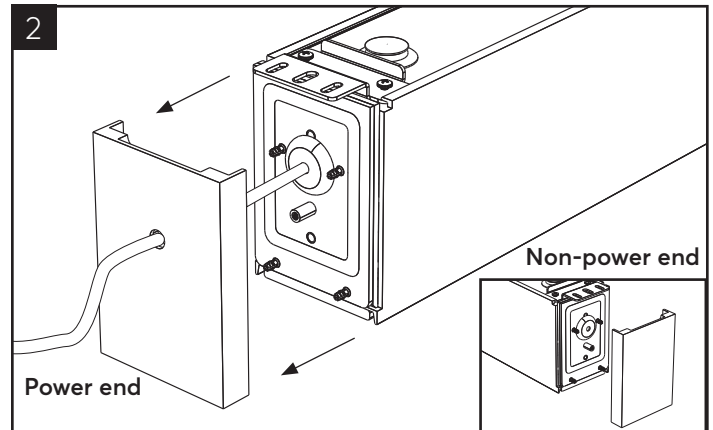


Determine where the fixture will be mounted. Locate mounting holes on the mounting bracket

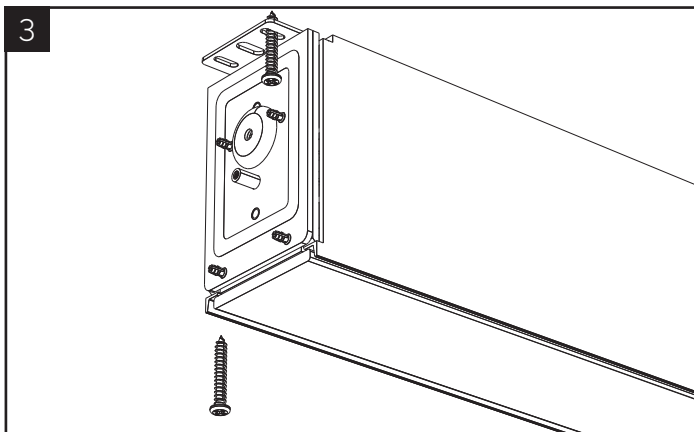


Secure fixture to ceiling structure using hardware my others

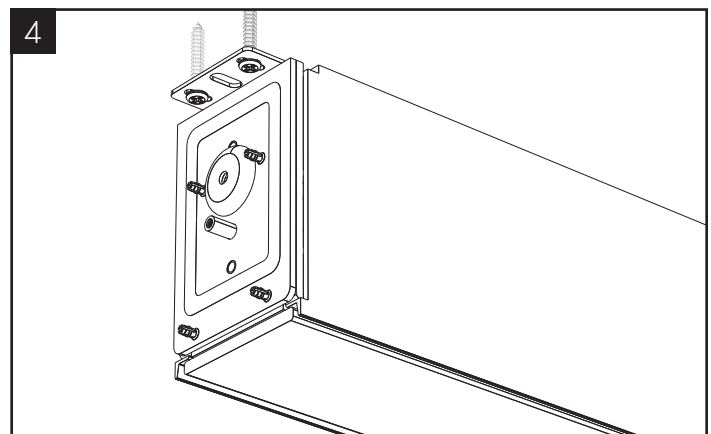

Ensure that the fixture is mounted securely

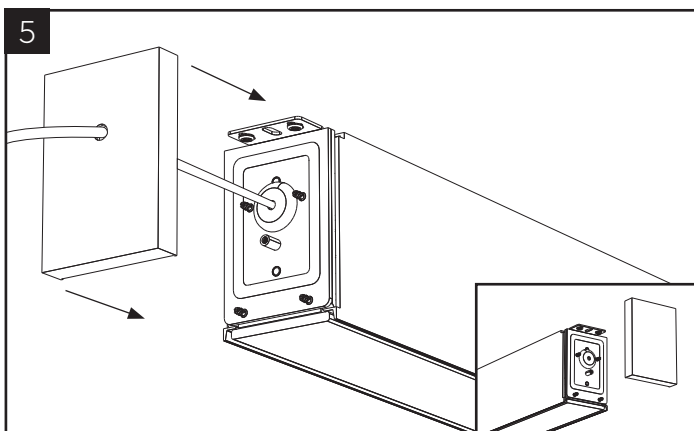


Replace the end cap at their respective ends of the fixture

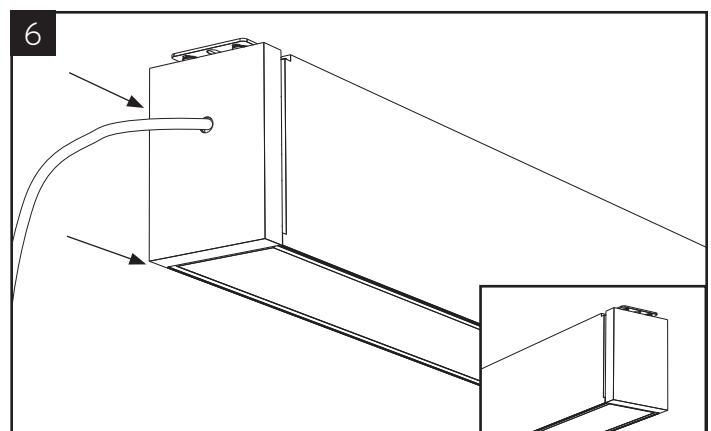


End caps are press-fit into place


INSTALLING AN INDIVIDUAL OR ROW STARTER LUMINAIRE

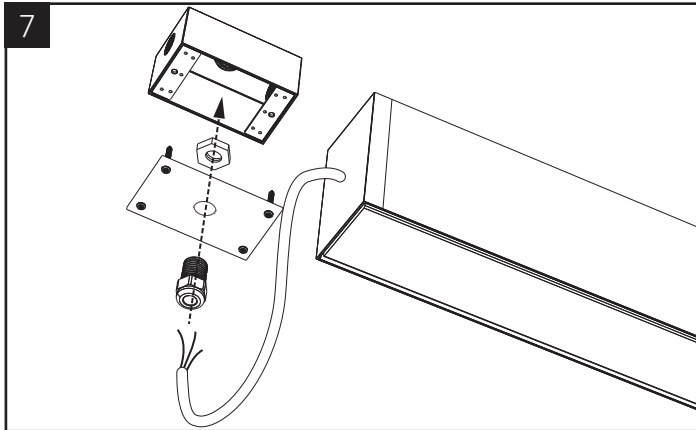


Feed the power cable from the luminaire through the strain relief bushing, wet location j-box cover, and bushing nut

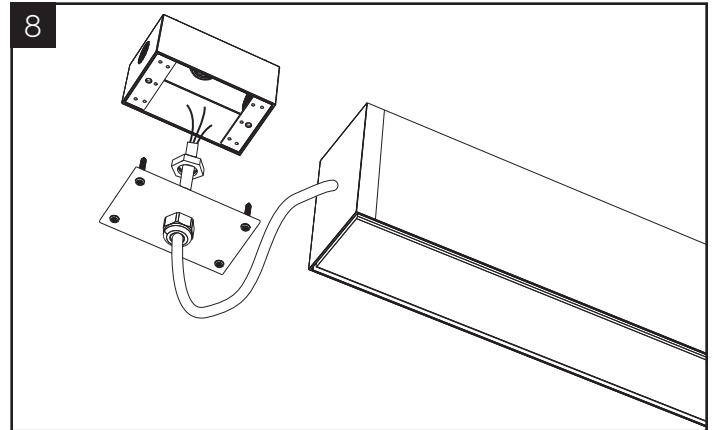


Secure the cable by tightening the bushing nut

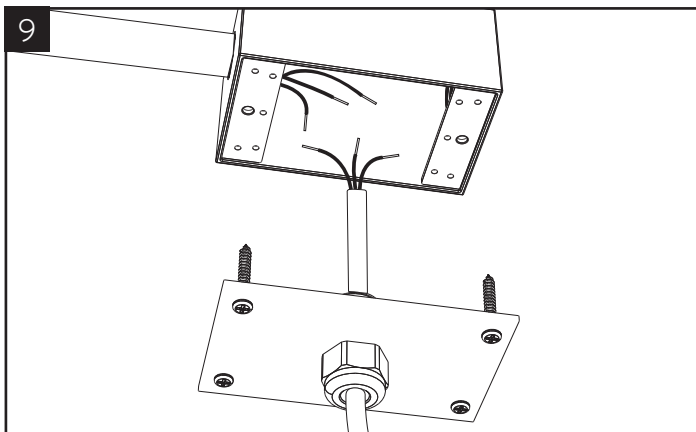


Connect the power wires to line power adhering to all local electrical codes

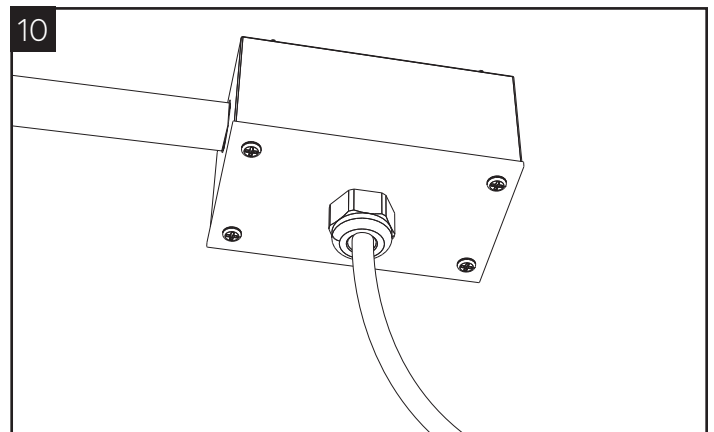


Tuck wire connections into the wet location box and secure the cover

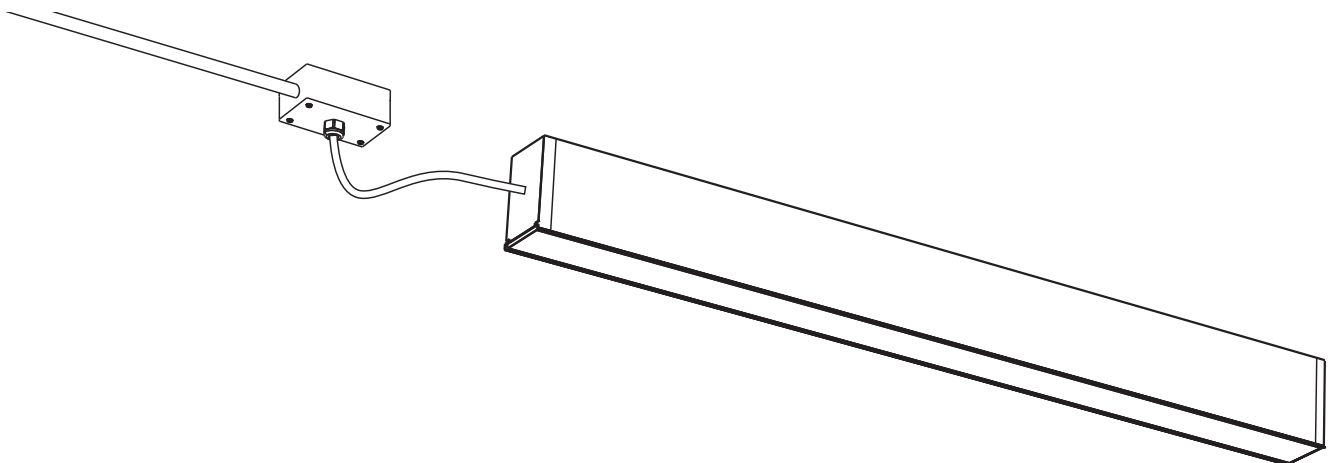


INSTALLING A ROW-MID OR ROW-END

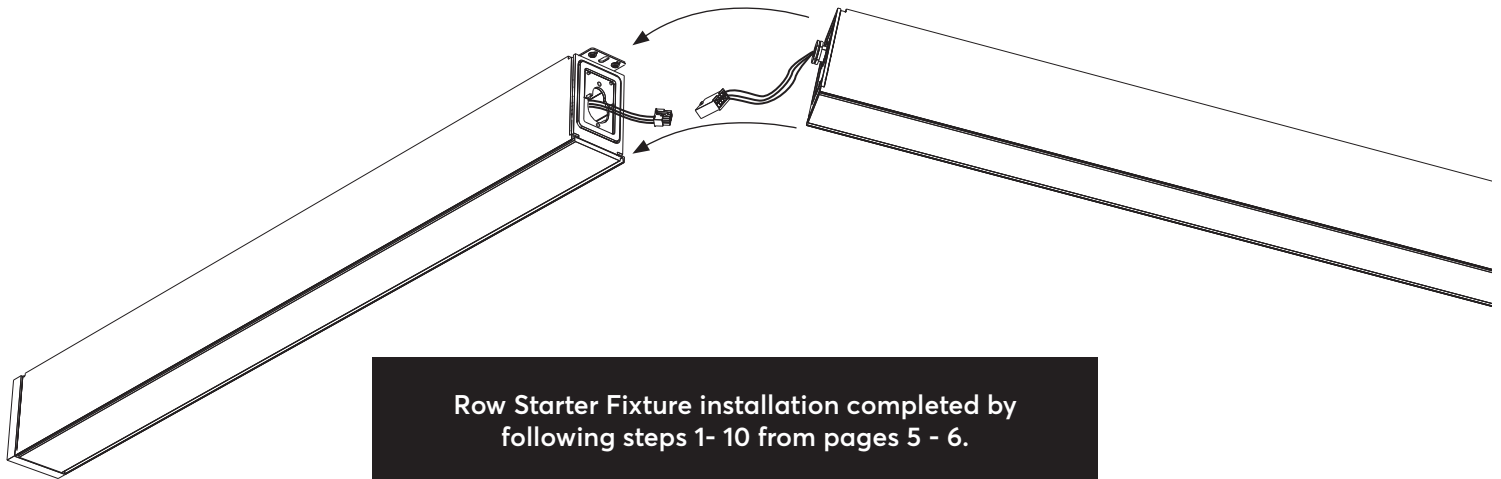

Prepare the next luminaire in the row for installation by following steps 1 - 4 on page 4

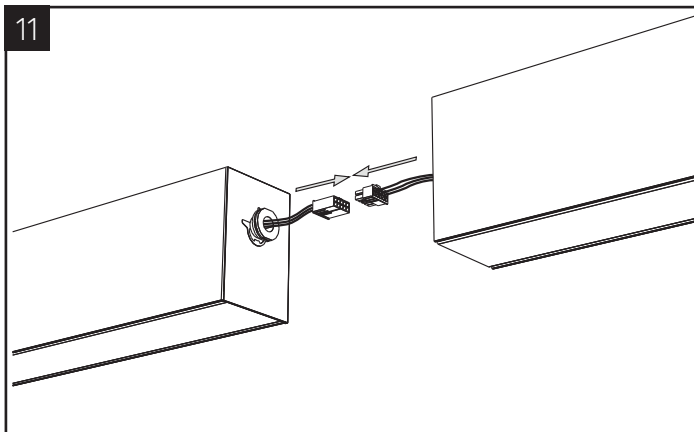


Connect the male and female quick connector to power the next luminaire in the row

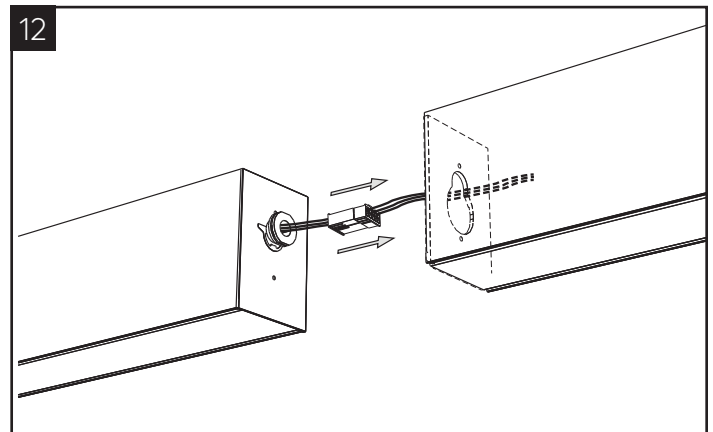


Tuck the wires and connectors into the starter or previous luminaire in the row


INSTALLING A ROW-MID OR ROW-END (AFTER STARTER HAS BEEN INSTALLED, STEP 1-6 FROM PAGE 3, 4, 5, & 6)

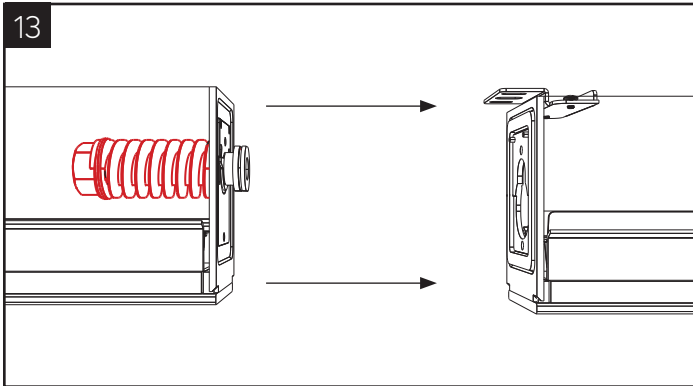


Push the luminaires together ensuring proper alignment

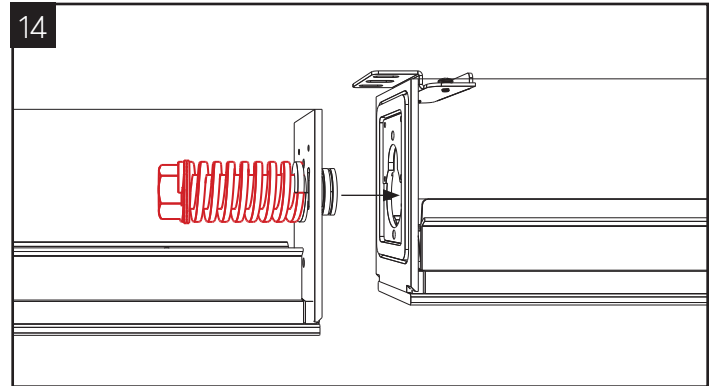

Insert the key stud from the new luminaire into the key hole on the previous luminaire

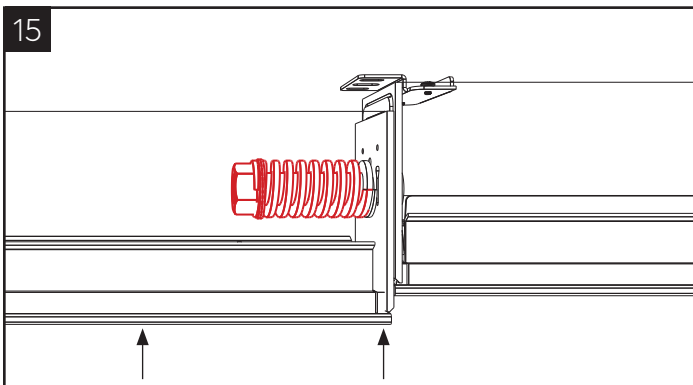

Push upward on the new luminaire to secure it to the previous luminaire

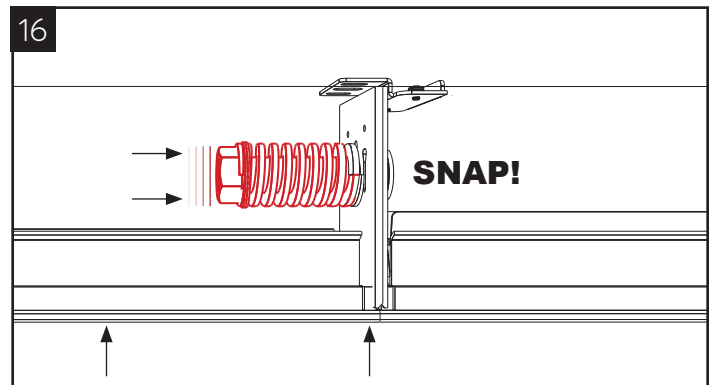

The upward motion will tighten the internal compression spring as the luminaires SNAP together for a secure fit

