



WARNINGS:

- Do not assemble continuous run on the ground and lift into place. Joints will distort and not create a tight fit. Joining hardware will have to be purchased and replaced.


- Risk of electrical shock or fire, disconnect power during installation or servicing. Read all instructions completely before starting installation. Install and wire in accordance to all national and local codes by a certified electrician. Fixture may be sharp, handle with care. Let fixture cool before maintenance.

AVERTISSEMENTS

- Risque d'électrocution ou d'incendie. Déconnectez l'alimentation durant l'installation ou la maintenance. Lisez attentivement toutes les instructions avant de commencer toute installation. Faites installer et câbler selon les normes Nationales et Locales par un électricien certifié. Les installations peuvent être coupantes, à manipuler avec précaution. Laissez refroidir les installations avant une opération de maintenance.

ADVERTENCIA

- Riesgo de descarga eléctrica o un incendio, desconecte la alimentación durante la instalación o servicio. Leer todas las instrucciones completas antes de empezar la instalación. Instalar y cablear en acuerdo a las reglas nacionales y códigos locales por un electricista certificado. El accesorio puede estar agudo, agarre con cuidado deje que el accesorio. Enfriar antes de mantenimiento.

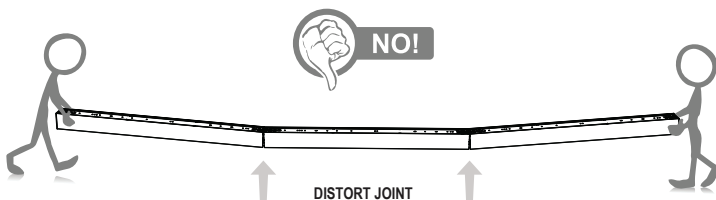

LIGHTING SYSTEM COMPONENTS

Every luminaire will have a companion driver enclosure, not all luminaires and driver enclosures are the same, please be sure to pair the proper driver enclosure to the proper luminaire by reading the packaging labels

1. LUMINAIRE



Package Contents

- Luminaire
- Includes factory installed 4 conductor low voltage power cord (48" Aircraft Cable = 78" Power Cord
120" Aircraft Cable = 150" Power Cord)
- Includes factory installed aircraft cable adjuster(s)

1. CANOPY/ DRIVER ENCLOSURE



Package Contents

- Driver enclosure with bar hanger flange, remove for retrofit applications
- Power Canopy Hardware Packet
 - (1) 5" diameter canopy
 - (1) Stainless Steel aircraft cable coupler
 - (1) 48" Plenum Rated Cord Sleeve
 - (1) 48" or 120" Aircraft Cable
 - (1) 8.25" Threaded Stem 1/4-20 (For Retrofit Only)
 - (1) 8.75" Threaded Stem 1/4-20 (New Construction 5/8" Sheet Rock)
 - (1) 9.5" Threaded Stem 1/4-20 (for 1 1/4" sheet rock)

3. NON-POWER MOUNT HANGING HARDWARE





Package Contents



- Notes:** Non-Power canopy hardware is only necessary for individual and row starter luminaires
- Non-Power Canopy Hardware Packet
 - (1) 3" diameter canopy
 - (1) Stainless Steel aircraft cable coupler
 - (1) 48" or 120" aircraft cable

LUMINAIRE DIMENSIONS



SERO

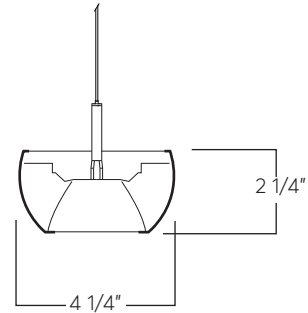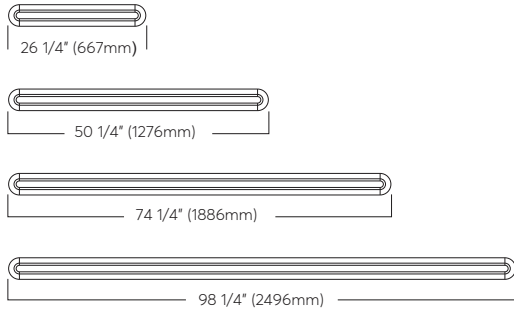




QūB

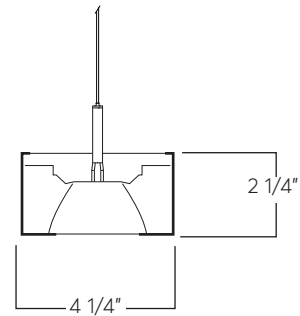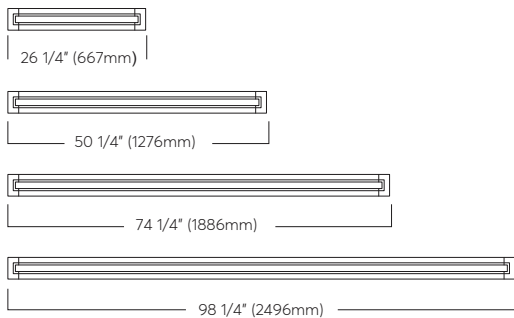


DRIVER ENCLOSURE DIMENSIONS

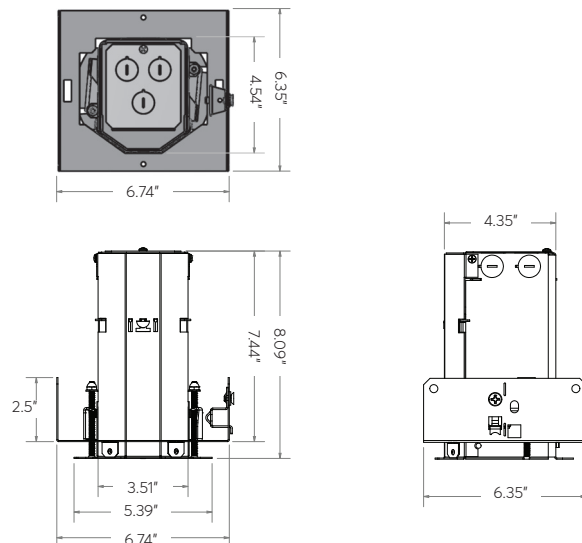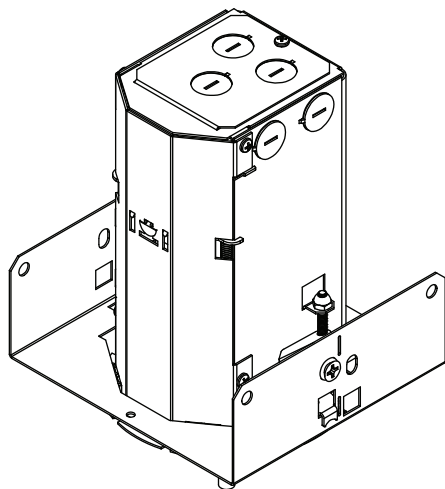


INSTALLING AN INDIVIDUAL OR ROW STARTER LUMINAIRE

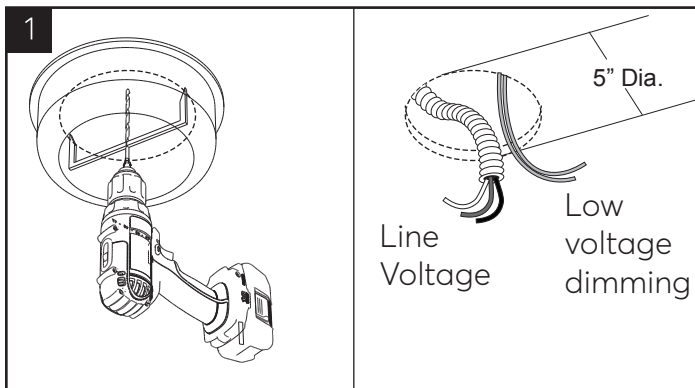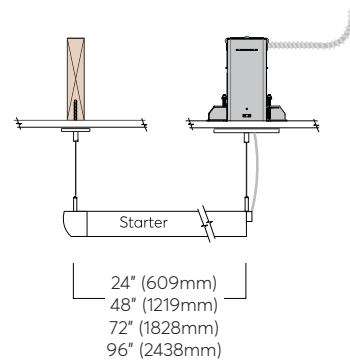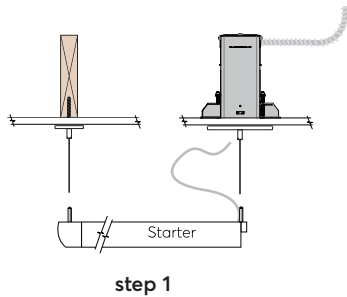


1 Cut 5" Diameter hole into sheet rock and pull wires through hole

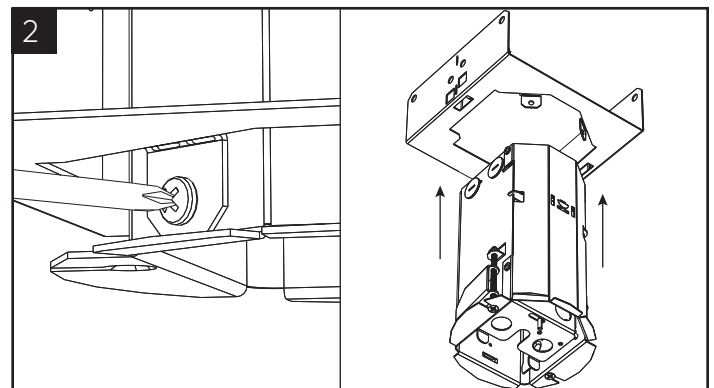

Remove and discard hanger bar flange after removing 3 screws

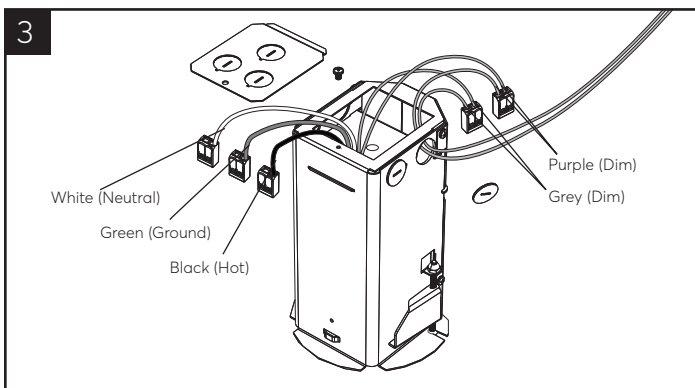


Remove top access cover and make low dimming wire connections if necessary

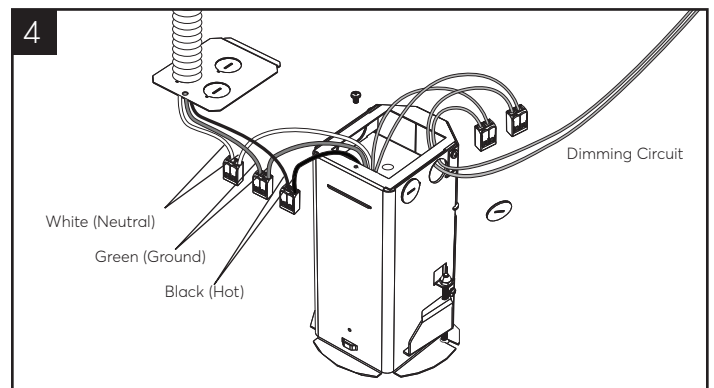


Make line voltage wire connections


INSTALLING AN INDIVIDUAL OR ROW STARTER LUMINAIRE

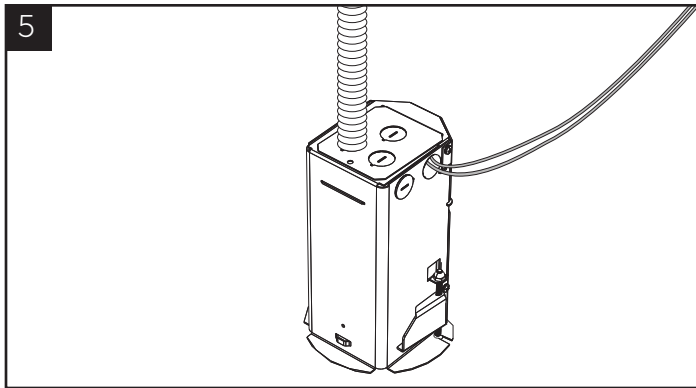


re-attach splice cover

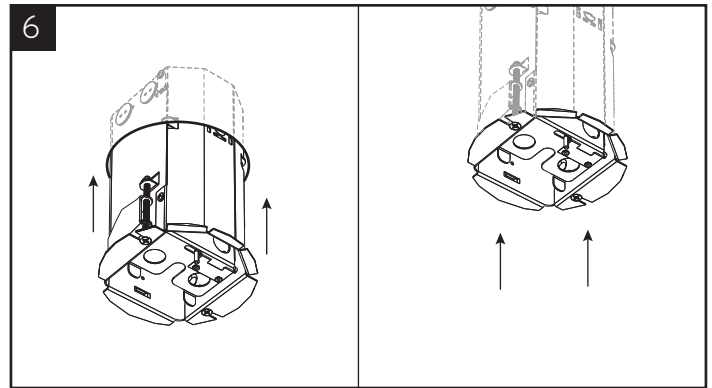


Insert driver enclosure into ceiling

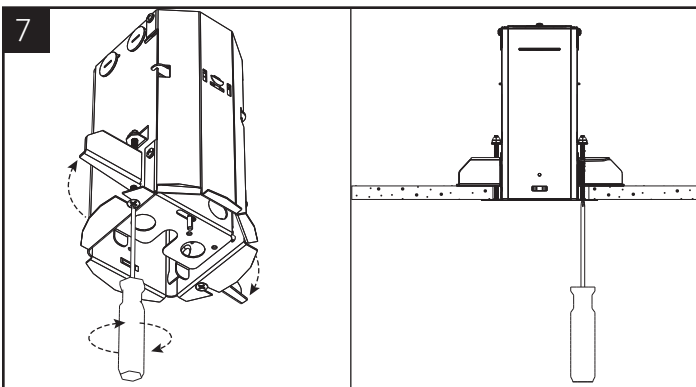


Rotate two philips screws clock wise to secure brackets to sheet rock

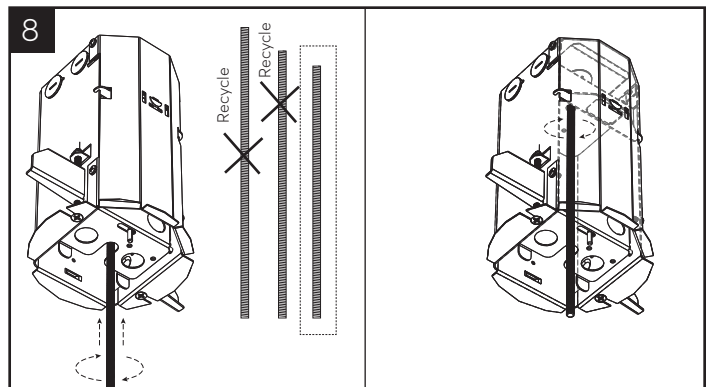

Install the smallest threaded rod into center of driver enclosure

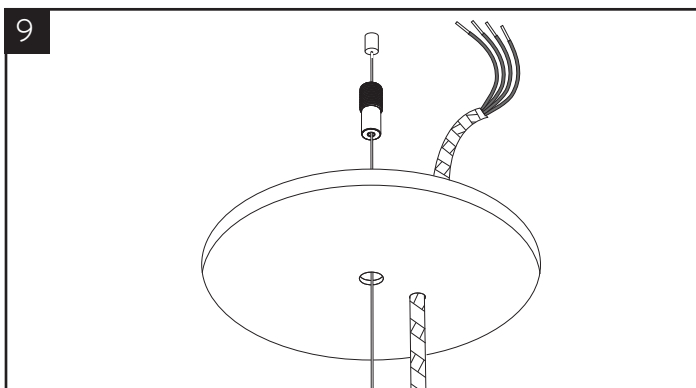


Thread cord, coupler and aircraft cable into canopy as shown

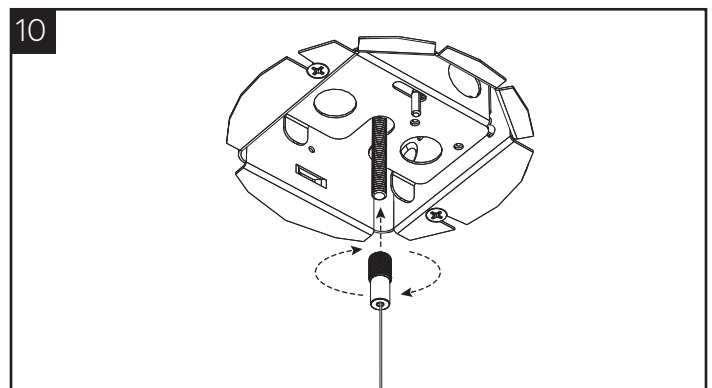


Connect coupler and aircraft cable to threaded stem


INSTALLING AN INDIVIDUAL OR ROWSTARTER LUMINAIRE

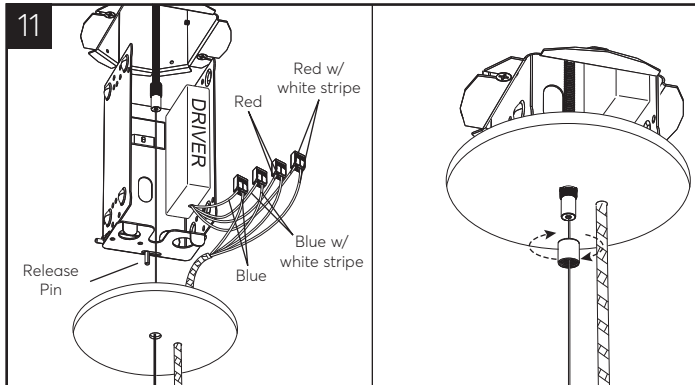


Remove driver cartridge by pushing release pin, and make low voltage wire connection, then push driver assembly back into enclosure and attach 5" canopy as shown

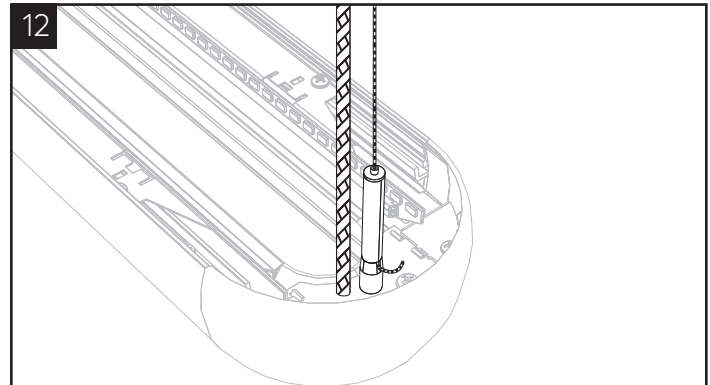

On power side thread aircraft cable through adjuster on luminaire (level and trim cable as last step)

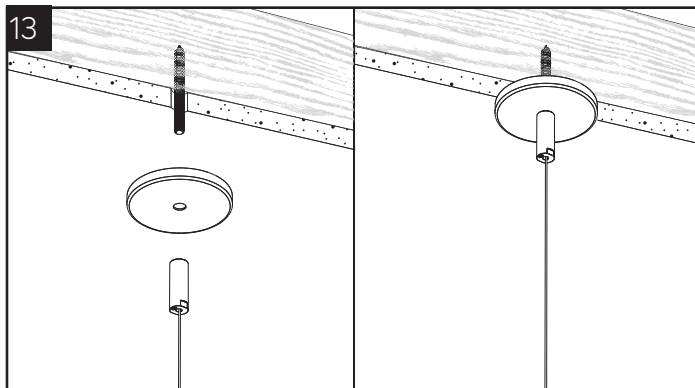

Screw threaded coupler and non-power canopy onto mounting stem to physically hang luminaire

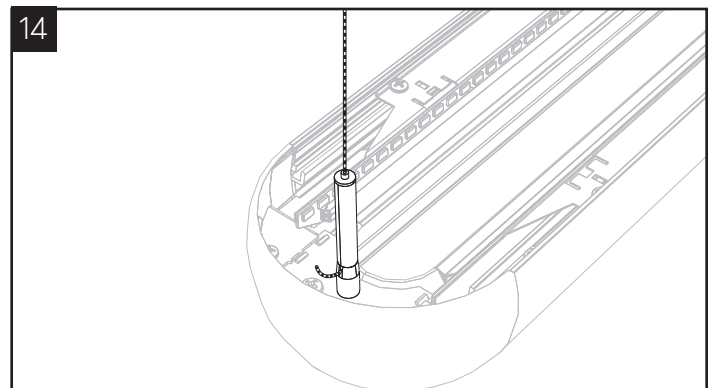


On non-power side thread aircraft cable through adjuster on luminaire (level and trim cable as last step)


INSTALLING A

ROW-MID OR ROW-END

(AFTER STARTER HAS BEEN INSTALLED, STEP 2 OR STEP 3)

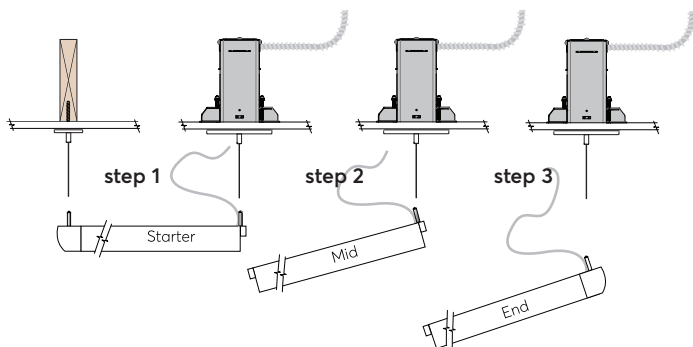


2 cable mounts in first fixture, only one cable mount in each subsequent fixture

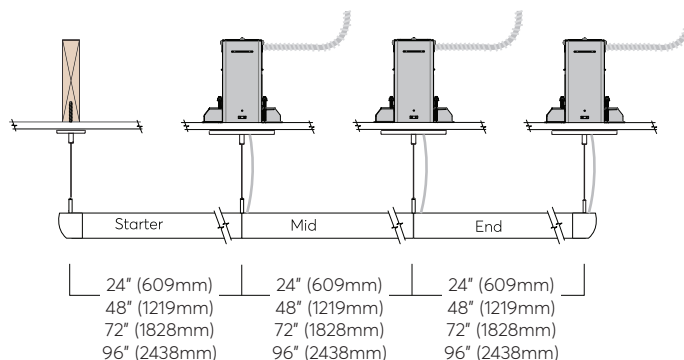

1-12

Repeat Steps 1-12 on page 4-6 to install next Grid driver enclosure in the row

13

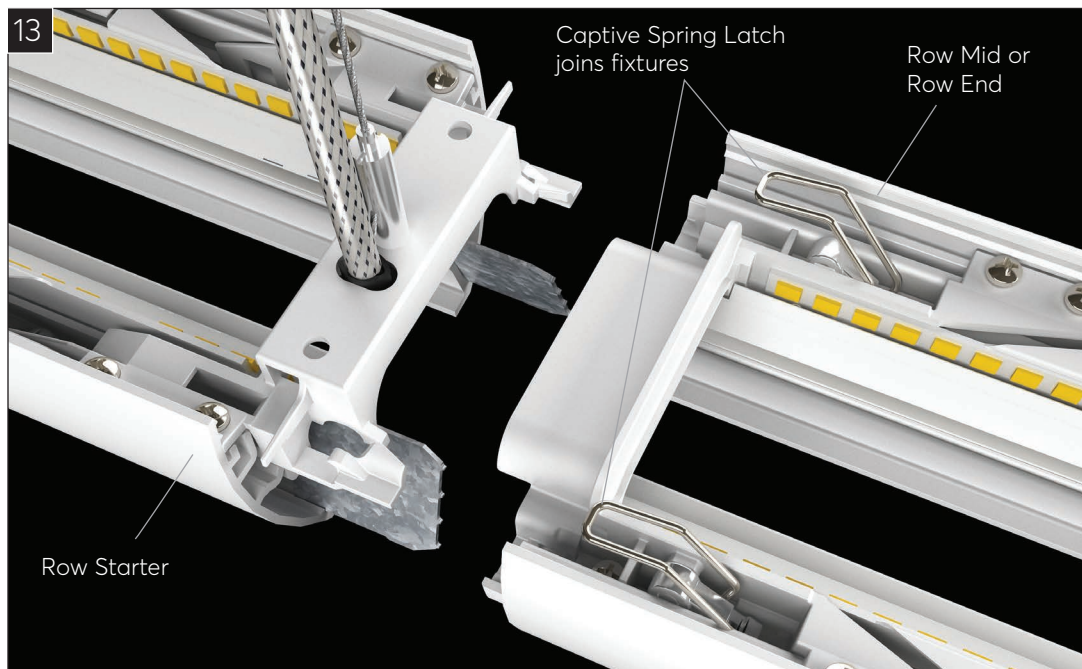

After the "Row Mid" or "Row End" has been suspended at the far end, connect the luminaire to the "Row Starter" by sliding the luminaires together and then using the spring latch to securely make the final connection.