



INDIVIDUAL FIXTURES

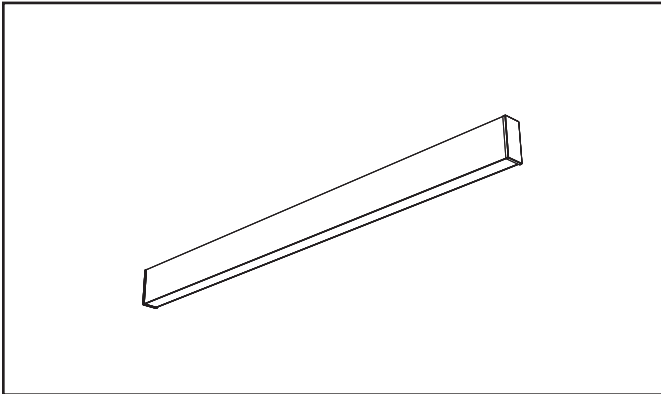

CONTINUOUS ROW FIXTURES

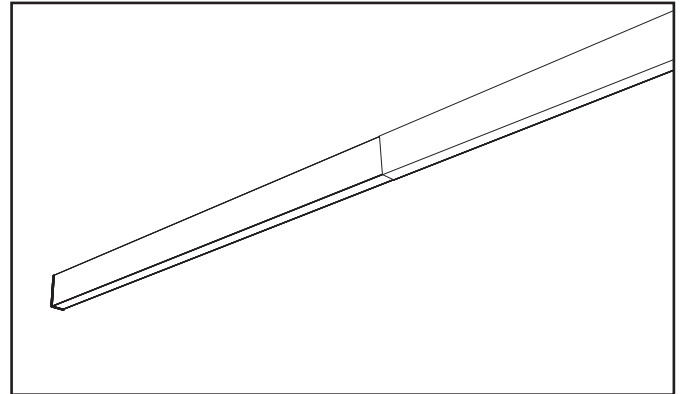

WARNINGS:

•Do not assemble continuous run on the ground and lift into place. Joints will distort and not create a tight fit. Joining hardware will have to be purchased and replaced.


•Risk of electrical shock or fire, disconnect power during installation or servicing. Read all instructions completely before starting installation. Install and wire in accordance to all national and local codes by a certified electrician. Fixture may be sharp, handle with care. Let fixture cool before maintenance.

AVERTISSEMENTS

•Risque d'électrocution ou d'incendie. Déconnectez l'alimentation durant l'installation ou la maintenance. Lisez attentivement toutes les instructions avant de commencer toute installation. Faites installer et câbler selon les normes Nationales et Locales par un électricien certifié. Les installations peuvent être coupantes, à manipuler avec précaution. Laissez refroidir les installations avant une opération de maintenance.


ADVERTENCIA

Riesgo de descarga eléctrica o un incendio, desconecte la alimentación durante la instalación o servicio. Leer todas las instrucciones completas antes de empezar la instalación. Instalar y cablear en acuerdo a las reglas nacionales y códigos locales por un electricista certificado. El accesorio puede estar agudo, agarre con cuidado de que el accesorio. Enfriar antes de mantenimiento.

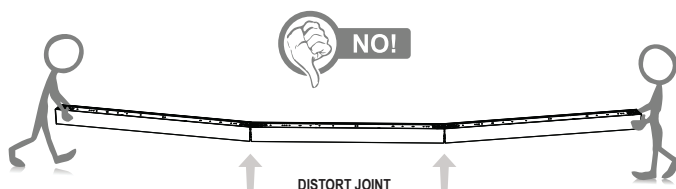

LIGHTING SYSTEM COMPONENTS

1. LUMINAIRE

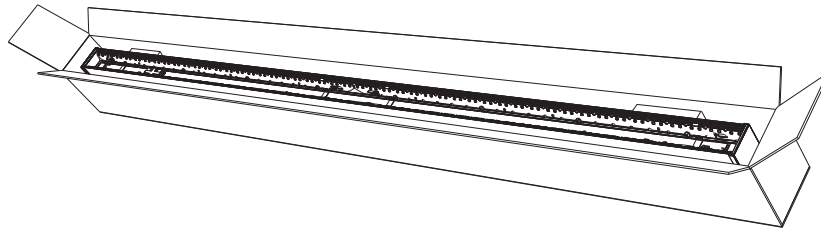


Package Contents


- Luminaire

***Every luminaire will have an integral driver.


INSTALLING AN INDIVIDUAL OR ROW STARTER LUMINAIRE

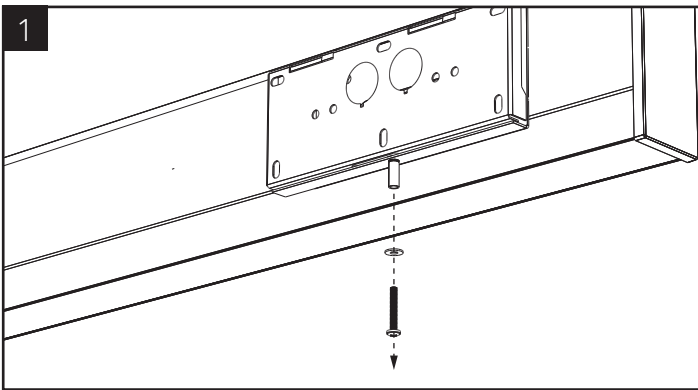

Remove Phillips head retaining screw and teflon washer from mounting plate. Set aside.

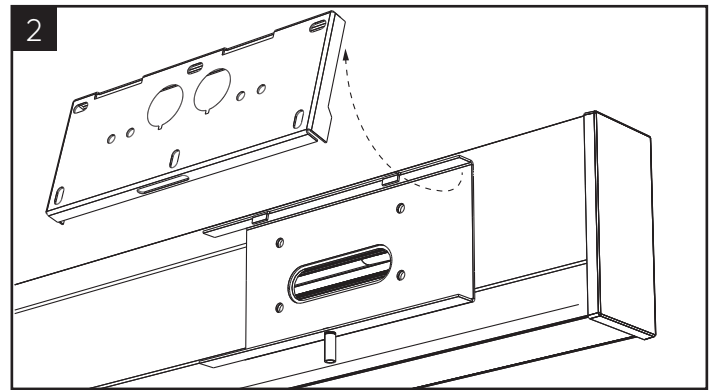


Remove mounting plates from each end of fixture.

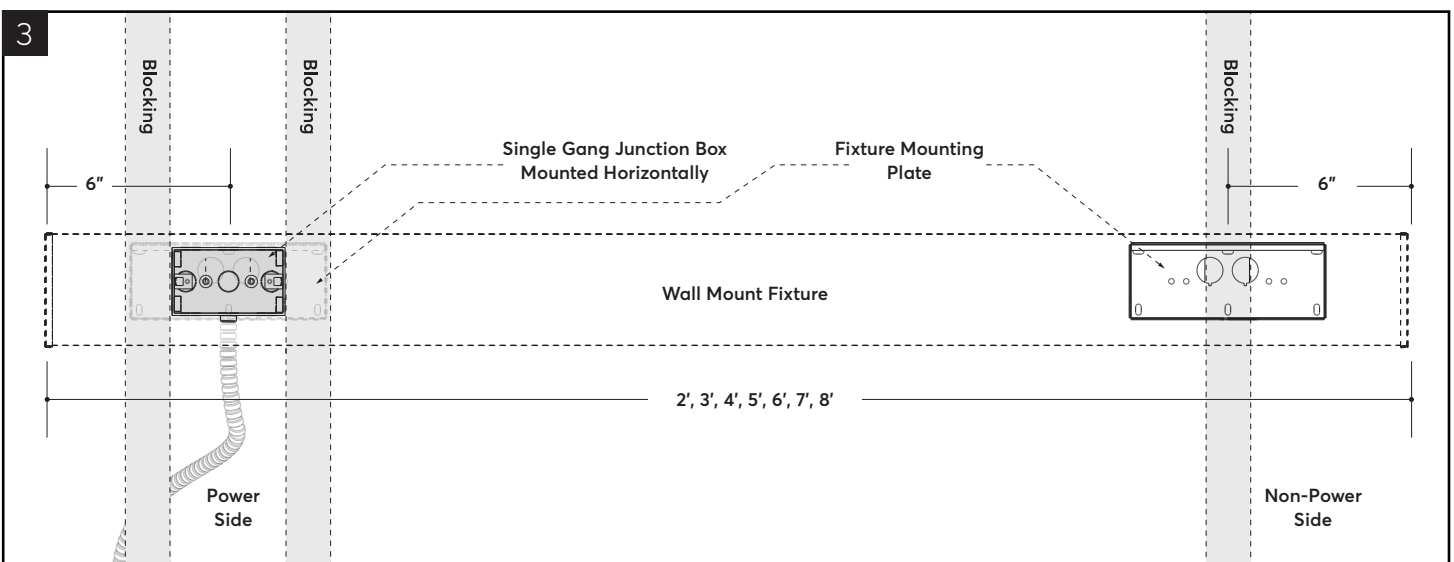


Rough-in electrical adhering to local codes. Install mounting plates to structure / blocking as shown.


CEILING MOUNTING DETAILS

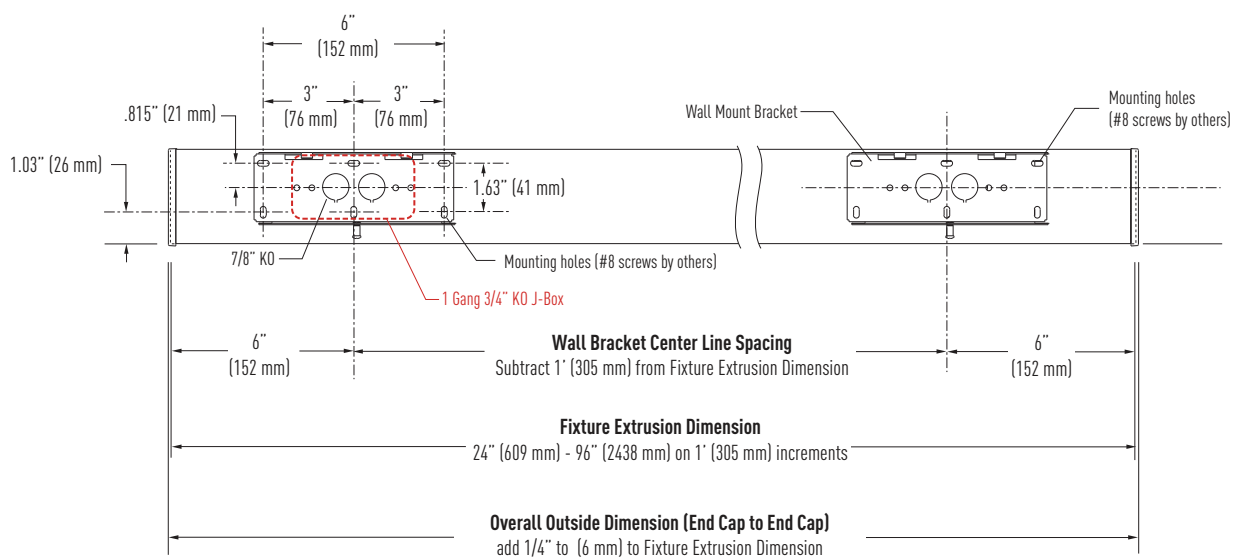


ROW LAYOUT DETAILS

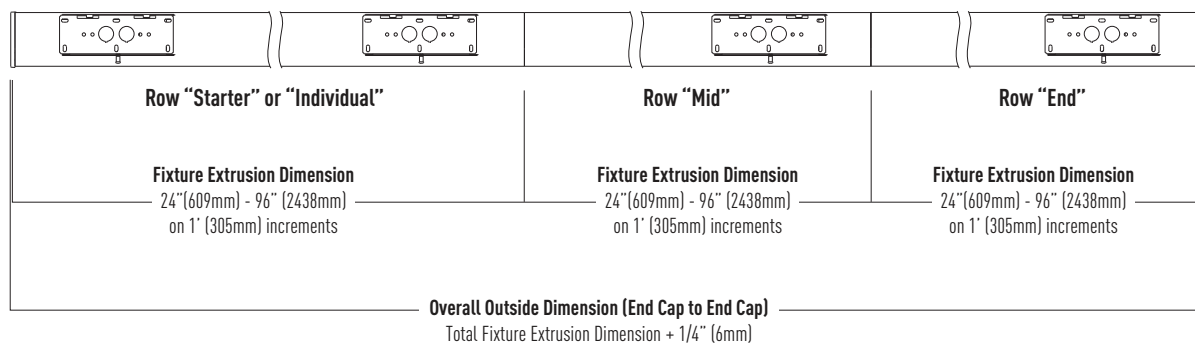

 
INSTALLING AN INDIVIDUAL OR ROW STARTER LUMINAIRE




Individual

 


Starter

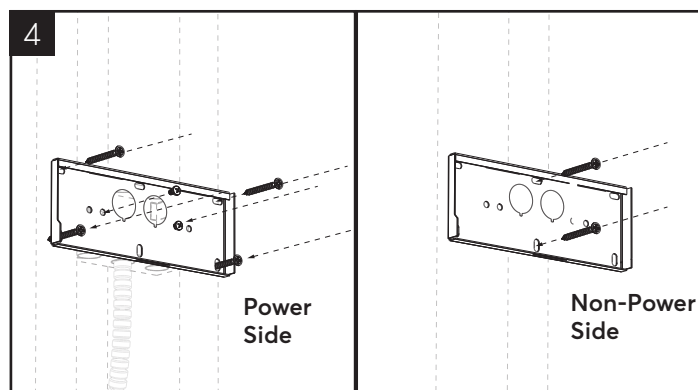


Secure mounting plates to blocking as shown.

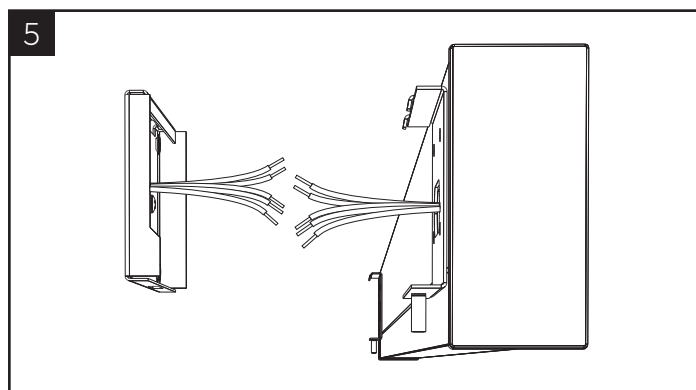

Connect wires per local electrical code.

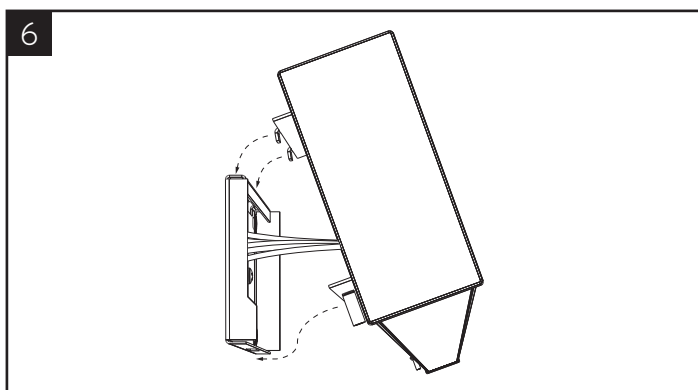


Hang fixture on to the backplate by inserting the two tabs into the slots on the top of the backplate.

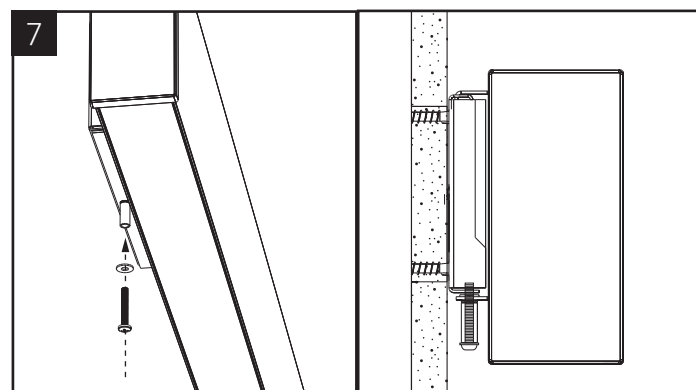

Secure fixture to wall by replacing the Phillips screw and teflon washer from step 1.

INSTALLING A ROW-MID OR ROW-END

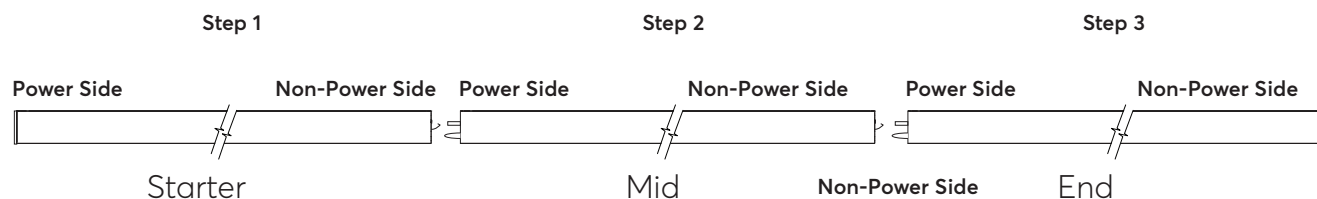


*Each fixture has two mounting plate located equal distance from each end regardless of fixture length.


Repeat steps 1, 2, 3, 4, 6, & 7 from pages 2 and 3 to install the next fixture in the row.

INSTALLING A ROW-MID OR ROW-END (AFTER STARTER HAS BEEN INSTALLED, STEP 1, 2, 3, 4, 5, 7 FROM PAGE 2 AND 3)


After the "starter" or "mid" is fully secured to the wall, then make power connection and mount the next luminaire, then join them together as shown below and secure with two torsion spring latches that are integrated into the luminaire.

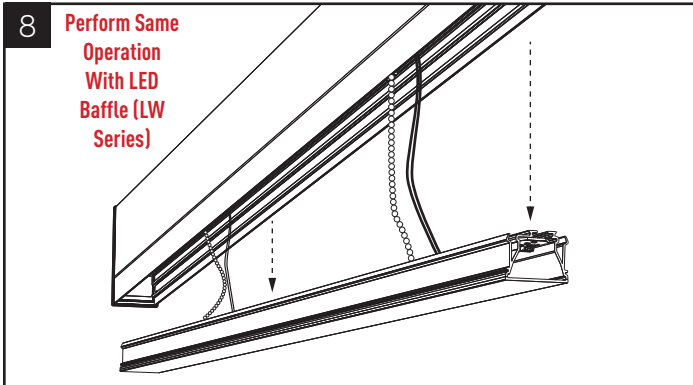


Dislodge the lens/LED board assembly from the bottom of the luminaire and let it hang by the support chains.

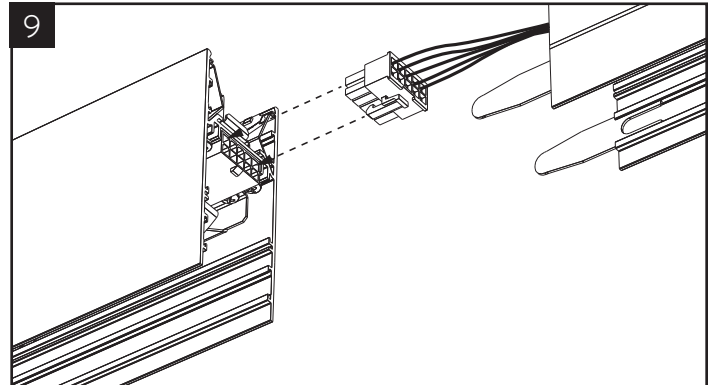


Connect male electrical connector from next fixture to female connector on the current fixture.

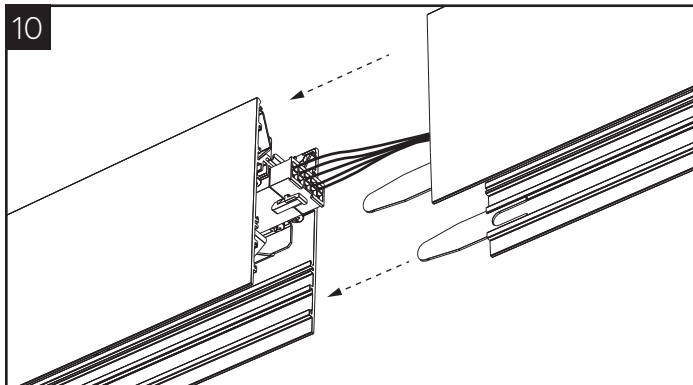


Insert alignment tabs from the next fixture into the slots on the current fixture.

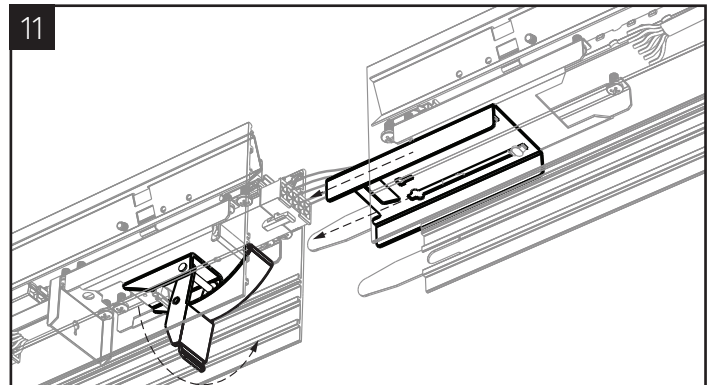

Release the alignment strap from the current fixture and extend the catch tray from the next fixture.

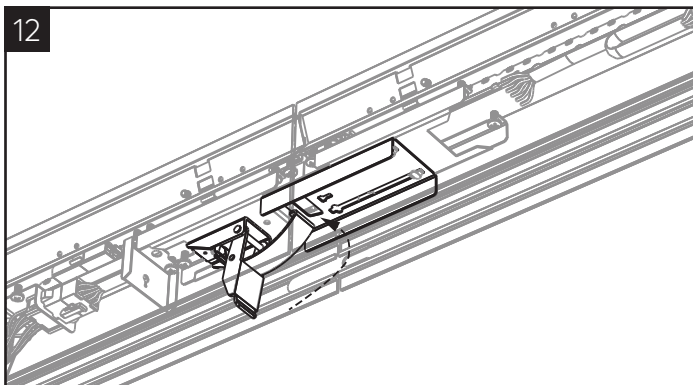


Connect the strap to the hole in the catch tray.

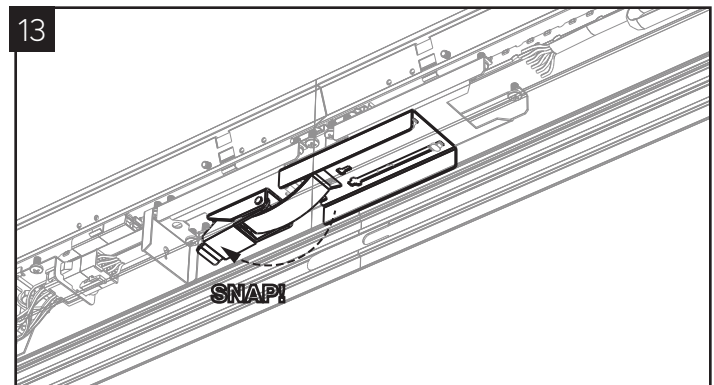

Collapse the alignment strap back to its original position to lock the two fixtures together.

INSTALLING A ROW-MID OR ROW-END (AFTER STARTER HAS BEEN INSTALLED, STEP 1, 2, 3, 4, 5, 7 FROM PAGE 2 AND 3)

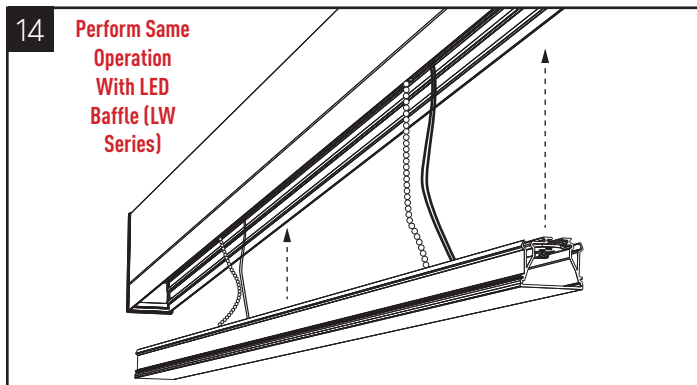

Replace the lens/LED board assembly from the bottom of the luminaire. Repeat for all fixtures in the row.

