




REGOLO GENERAL WARNING




WARNING:

DO NOT ASSEMBLE CONTINUOUS RUN ON THE GROUND AND LIFT INTO PLACE.
JOINTS WILL DISTORT AND NOT CREATE A TIGHT FIT.
JOINING HARDWARE WILL HAVE TO BE PURCHASED AND REPLACED.

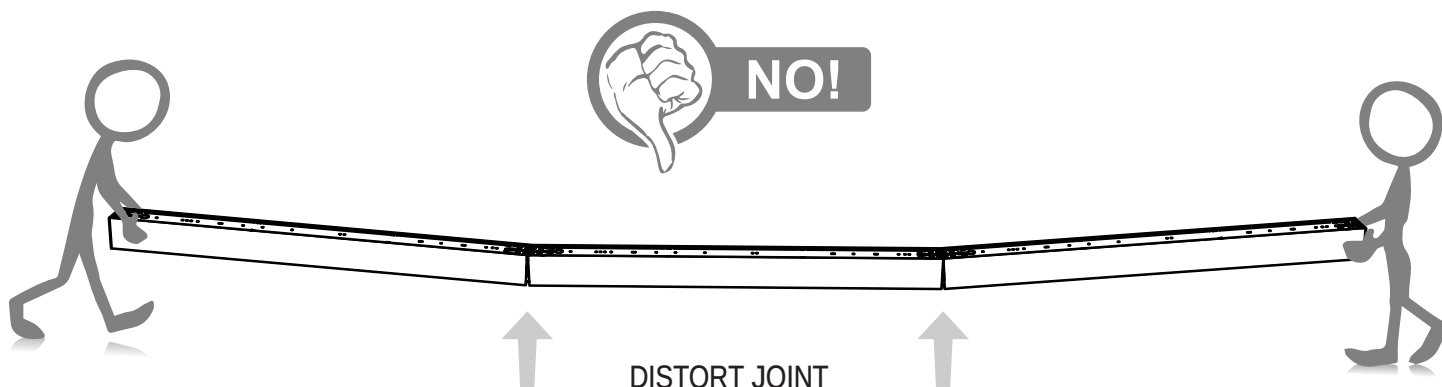

FOR PROPER INSTALL INFORMATION SEE
RESPECTIVE SERIES INSTALLATION INSTRUCTIONS.

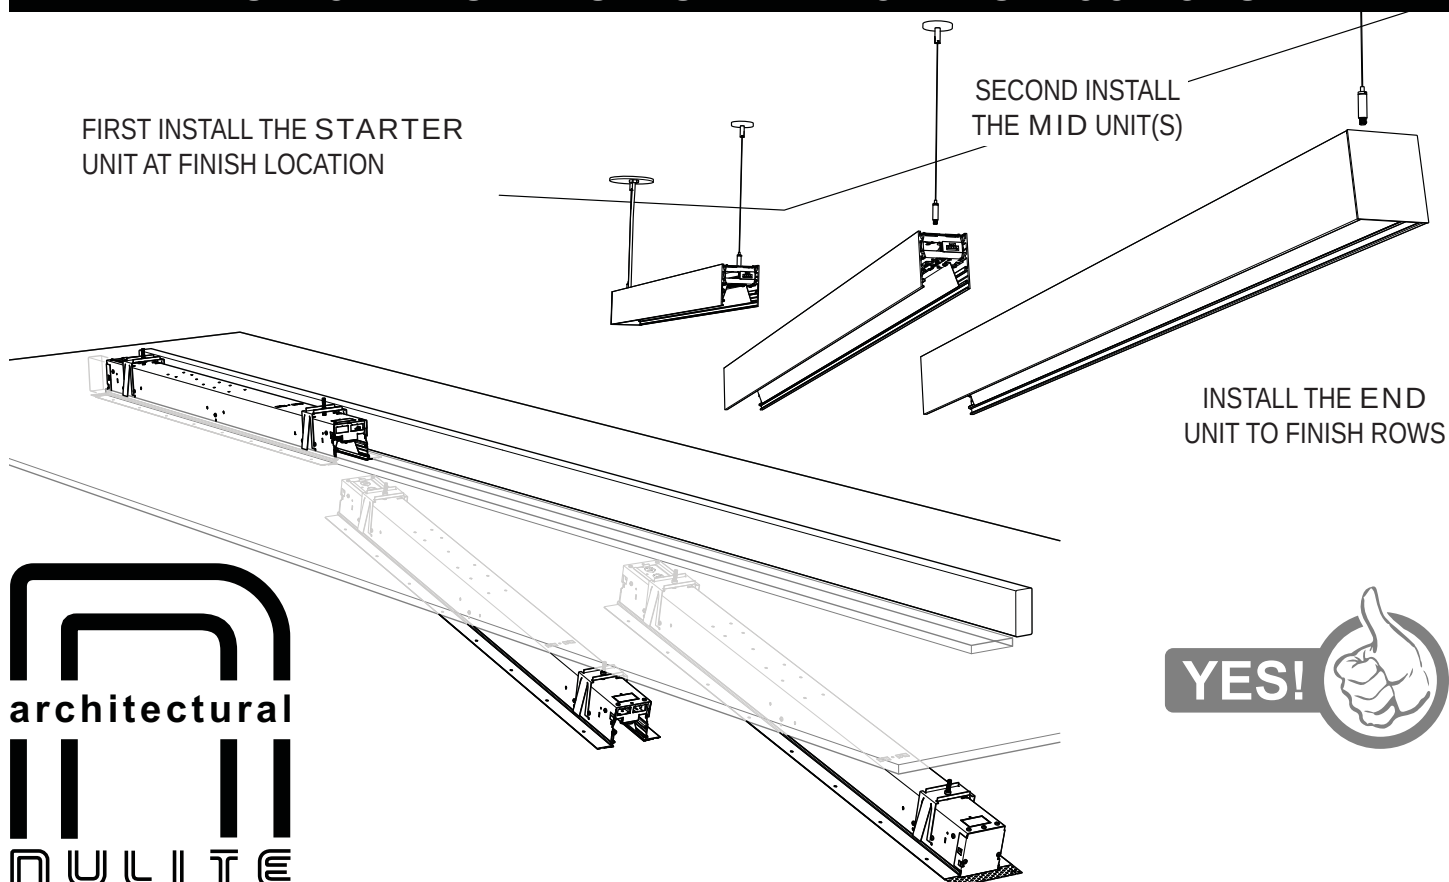

10770 East 51st Ave, Denver, CO 80239 - Phone (303)287-9646 Fax (303)287-0316

Instructions and dimensions are subject to change without notification. Instruction sheets on our website supersede all other versions.

2016 Rev. A

REGOLO WALL

INSTALLATION INSTRUCTIONS

⚠ WARNINGS


Risk of electrical shock or fire, disconnect power during installation or servicing. Read all instructions completely before starting installation. Install and wire in accordance to all national and local codes by a certified electrician. Fixture may be sharp, handle with care. Let fixture cool before maintenance.

⚠ AVERTISSEMENTS

Risque d'électrocution ou d'incendie. Déconnectez l'alimentation durant l'installation ou la maintenance. Lisez attentivement toutes les instructions avant de commencer toute installation. Faites installer et câbler selon les normes Nationales et Locales par un électricien certifié. Les installations peuvent être coupantes, à manipuler avec précaution. Laissez refroidir les installations avant une opération de maintenance.

⚠ ADVERTENCIA


Riesgo de descarga eléctrica o un incendio, desconecte la alimentación durante la instalación o servicio. Leer todas las instrucciones completas antes de empezar la instalación. Instalar y cablear en acuerdo a las reglas nacionales y códigos locales por un electricista certificado. El accesorio puede estar agudo, agarre con cuidado deje que el accesorio. Enfriar antes de mantenimiento.

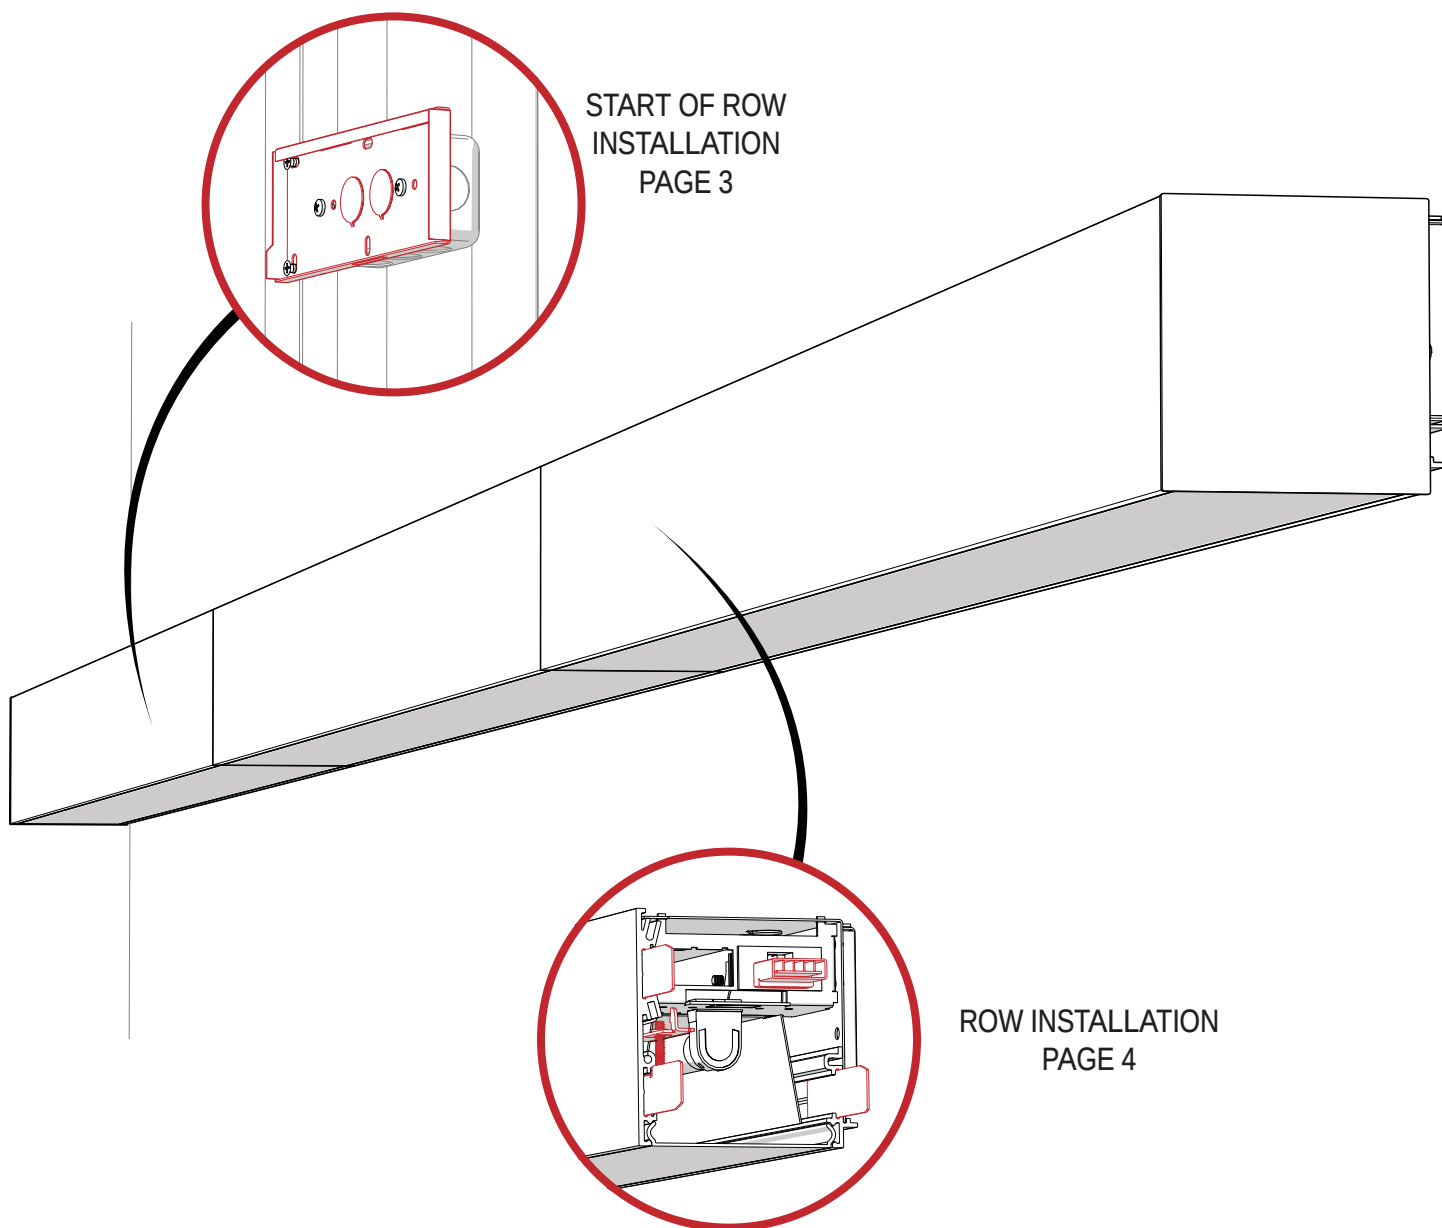


OVERVIEW



LENS REMOVAL TOOL




INTERMEDIATE POWER
SUPPLY COUPLER

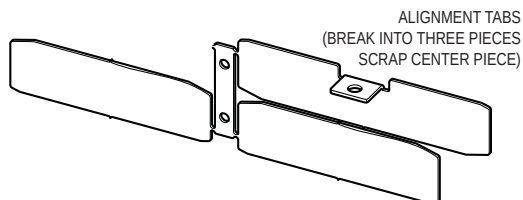

ALIGNMENT TABS
(BREAK INTO THREE PIECES
SCRAP CENTER PIECE)





JOINER BRACKET AND
HARDWARE ONE 6-32 X 7/8"
PHILLIPS PAN HEAD SCREW

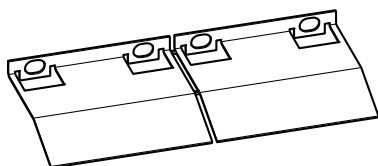


JOINT COVER BRACKETS
AND HARDWARE (4)
#8 X 1/4" PHILLIPS PAN
HEAD SCREWS

*NOTE: JOINT COVER BRACKET MAY
BE DIFFERENT THAN SHOWN.

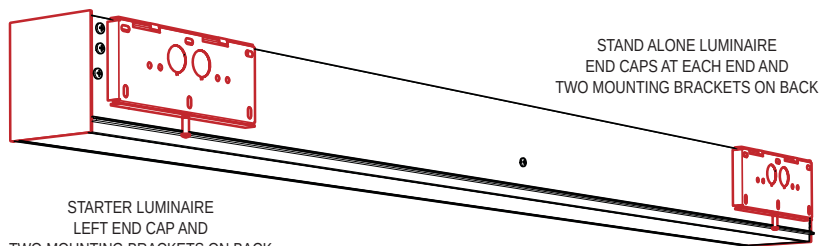



STAND ALONE LUMINAIRE
END CAPS AT EACH END AND
TWO MOUNTING BRACKETS ON BACK

STARTER LUMINAIRE
LEFT END CAP AND
TWO MOUNTING BRACKETS ON BACK

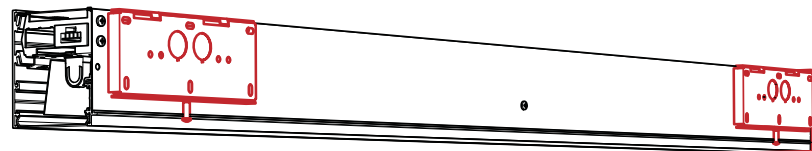

MID LUMINAIRE
NO END CAPS AND
ONE MOUNTING BRACKET ON BACK

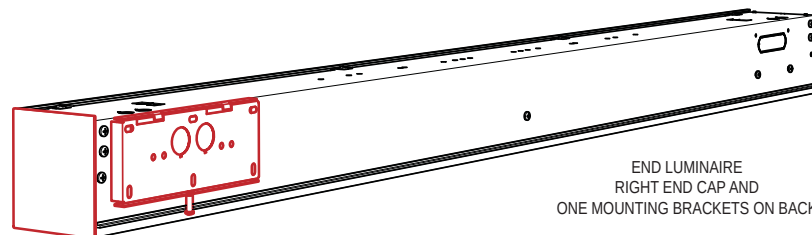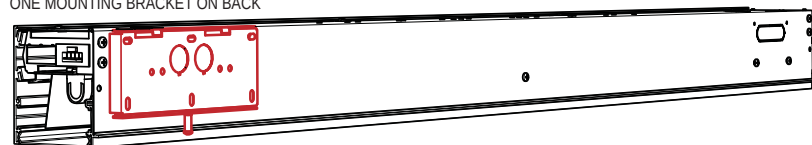


END LUMINAIRE
RIGHT END CAP AND
ONE MOUNTING BRACKET ON BACK


MAINTENANCE




AVOID TOUCHING THE LED BOARDS

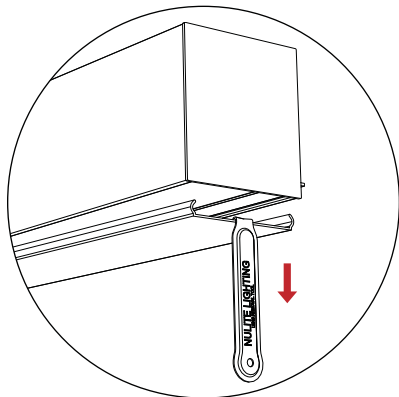

Gently insert lens removal tool at one
end of the lens and pull down. Pull
the exposed end down and remove
lens. Store the tool in a safe place.

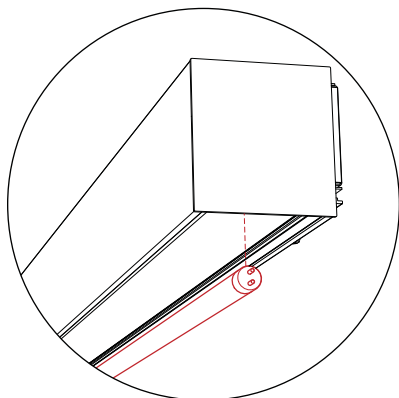


If access to wire way is needed, remove the
lamp(s) if applicable. Remove one screw from the
reflector, rotate and shift to remove the reflector
completely. Store the reflector in a clean, safe
place during installation or maintenance.

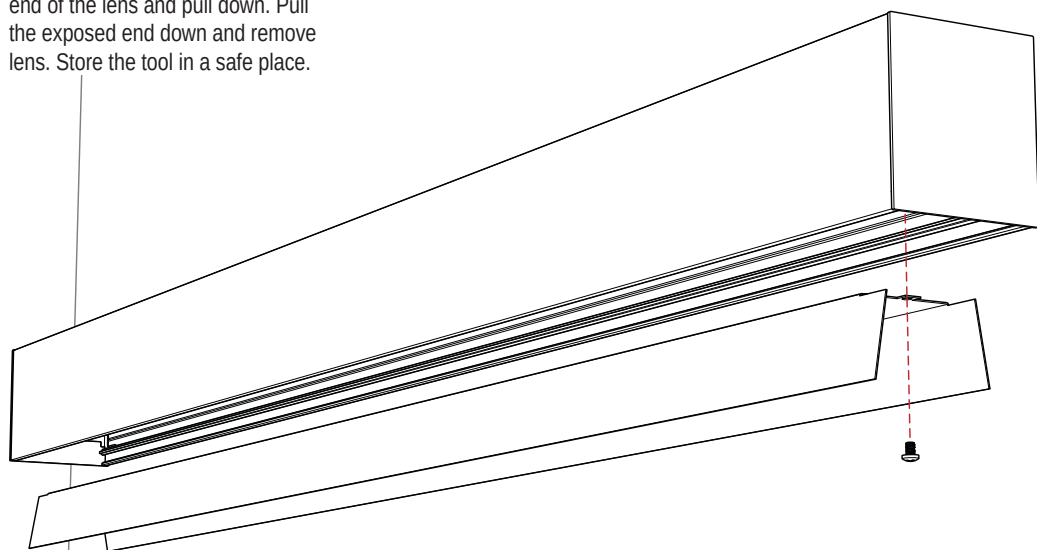


WALL MOUNTING BRACKET LAYOUT


⚠ RUN CONFIGURATIONS ARE SPECIFIC TO FACTORY DRAWINGS. CONSULT SUBMITTAL BEFORE BEGINNING INSTALLATION. ⚠

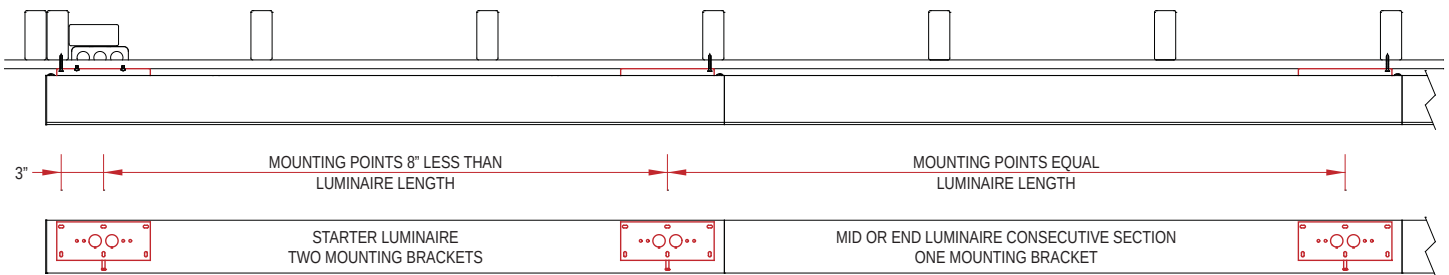

PLAN VIEW OF WALL MOUNTING BRACKET

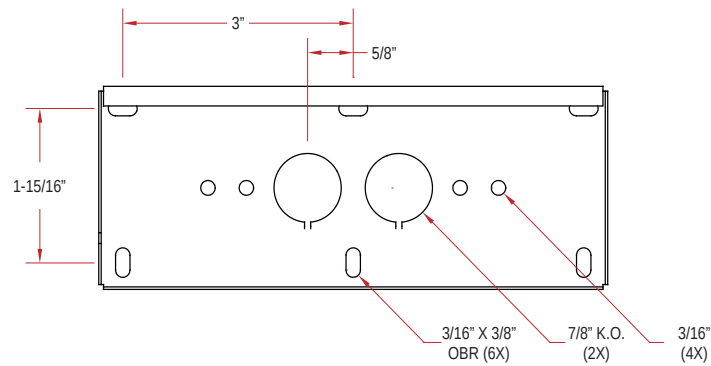

PLAN VIEW OF HOUSING BACK

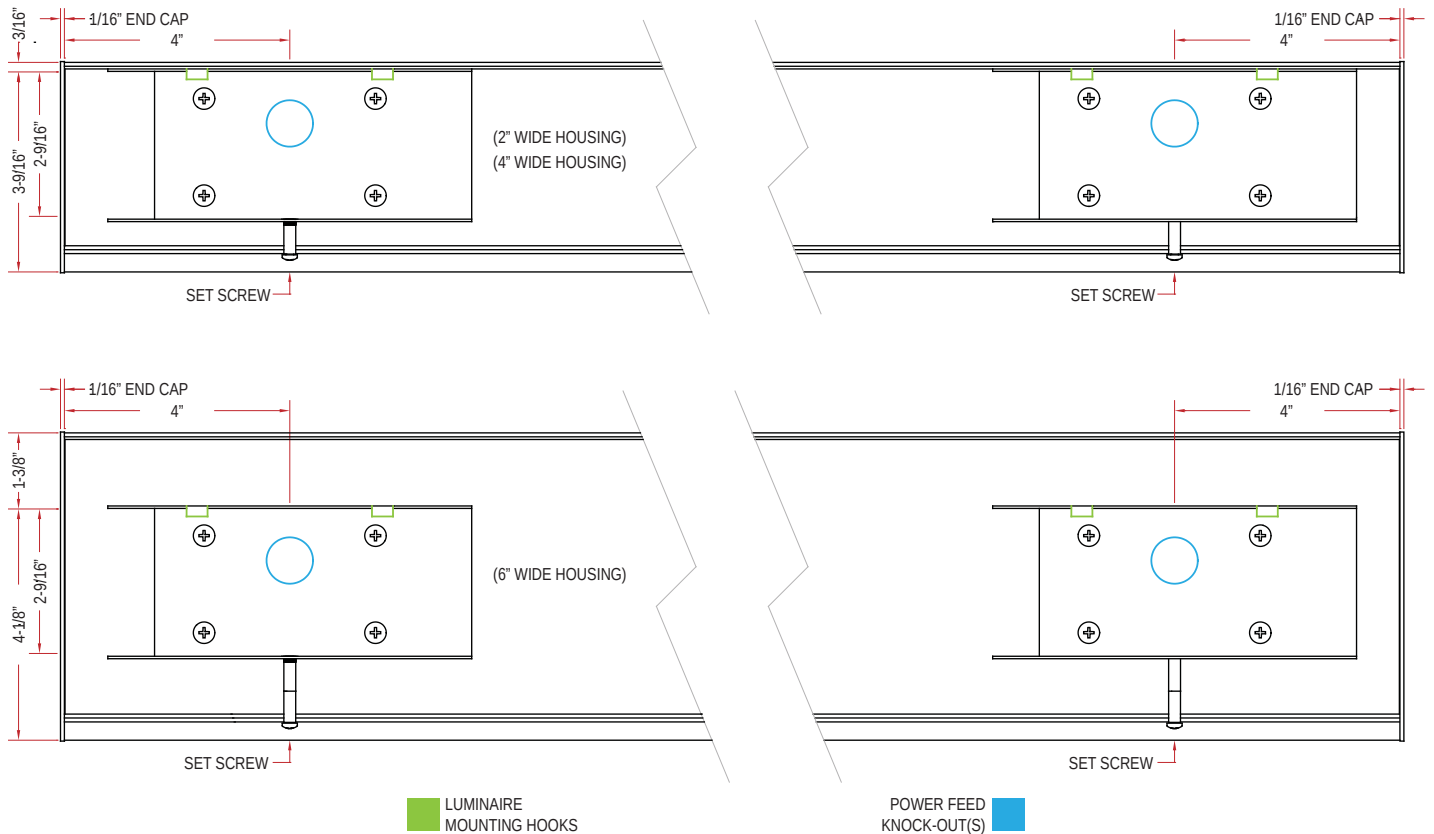




ROW INSTALLATION - INDIVIDUAL INSTALLATION FOLLOW STEPS 1 THROUGH 4




1

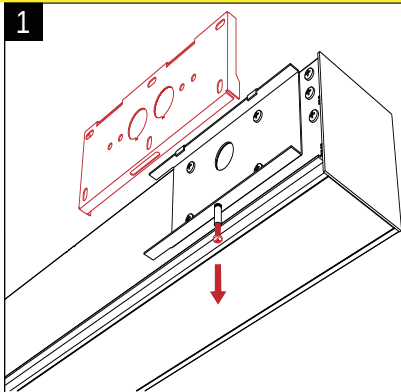


Remove the two wall mounting brackets from the back of the stand alone or starter luminaire.

2

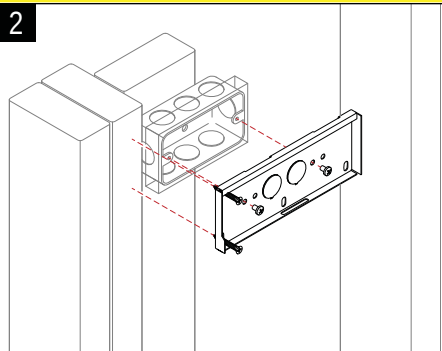


Layout and install the wall mounting brackets. (Extra blocking, J-Box and hardware by others. Refer to PG-3 for bracket layout).

3

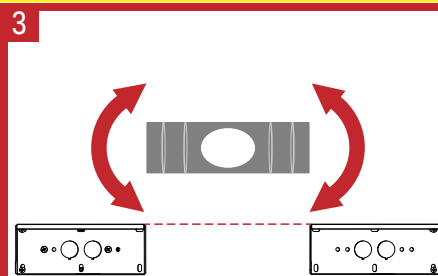


The stand alone or starter luminaire wall mounting brackets must be level before hanging the luminaire. Mount all wall brackets before continuing row installation.

4

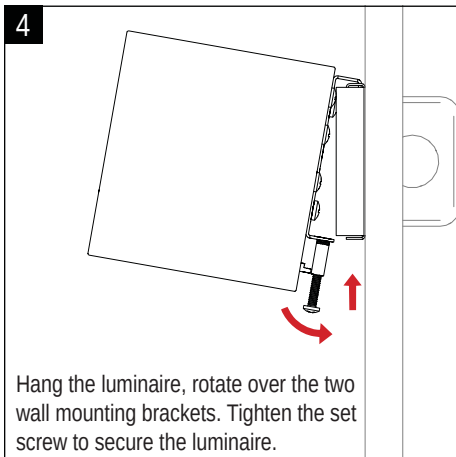


Hang the luminaire, rotate over the two wall mounting brackets. Tighten the set screw to secure the luminaire.

5

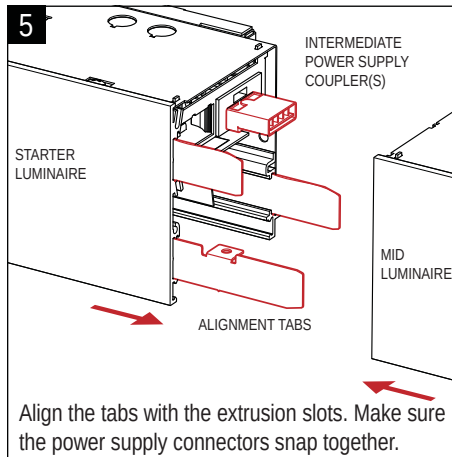


Align the tabs with the extrusion slots. Make sure the power supply connectors snap together.

6

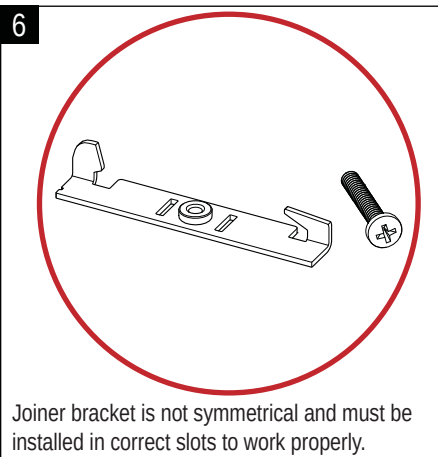


Joiner bracket is not symmetrical and must be installed in correct slots to work properly.

7

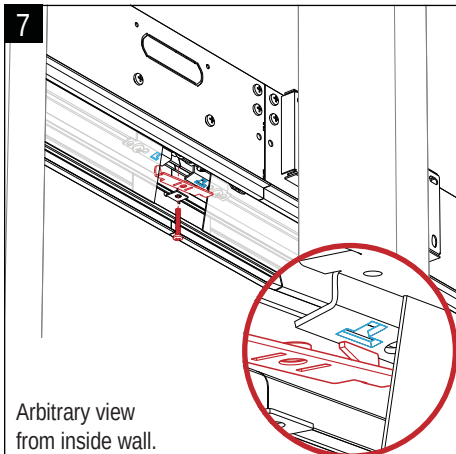


Arbitrary view from inside wall.

8

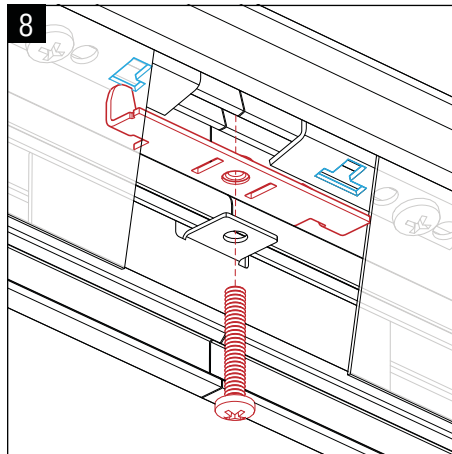


9

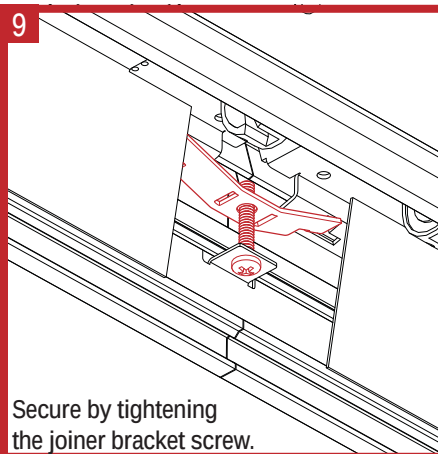

Secure by tightening the joiner bracket screw.

10

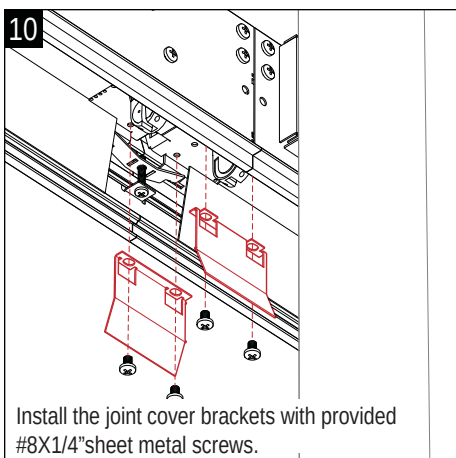

Install the joint cover brackets with provided #8X1/4" sheet metal screws.